

# Matrox Solios eCL/XCL

## Camera Interface Application Note

### Photonfocus MV-D1024-80-CL-8      October 5, 2006

*Basics about the  
camera*

*Mode of operations as  
per Matrox Imaging (in  
parentheses as per  
camera manufacturer)*

*Basics about the  
interface modes*

#### Camera Descriptions

- Effective resolution:  $1024 \times 1024 \times 8\text{-bit}$  @ 75 fps.
- Camera Link BASE interface (8-bit, dual tap).
- Progressive scan.
- Internal sync.
- Internal exposure control.
- 40 MHz pixel clock rate.


#### Interface Mode

- Continuous (Free Running)
- Pseudo-continuous (Trigger)
- Asynchronous reset (Trigger)

#### Camera Interface Briefs

##### Mode 1: Continuous

- $1024 \times 1024 \times 8\text{-bit}$  @ 75 fps.
- Camera Link BASE interface (8-bit, dual tap).
- Matrox Solios eCL/XCL receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 40 MHz) and video from camera.
- DCF used: [MVD102480CL8\\_1024x1024\\_8bit2tapCon.DCF](#)

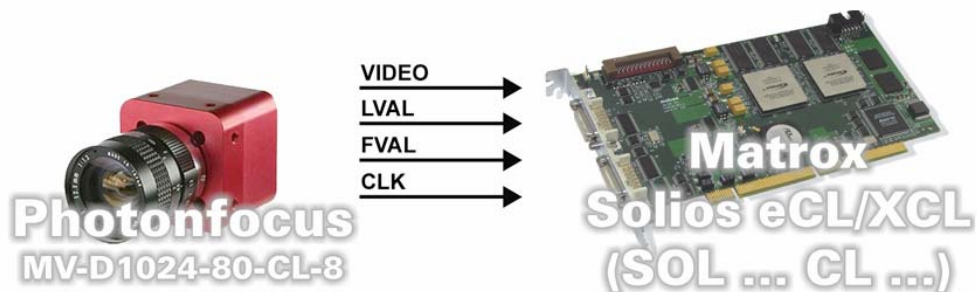

##### Mode 2: Pseudo-continuous

- $1024 \times 1024 \times 8\text{-bit}$ .
- Camera Link BASE interface (8-bit, dual tap).
- Matrox Solios eCL/XCL sending EXPOSURE1 (CC1) signal to camera to initiate and control the exposure.
- Matrox Solios eCL/XCL receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 40 MHz) and video from camera.
- DCF used: [MVD102480CL8\\_1024x1024\\_8bit2tapPcon.DCF](#)

Continued...

# Matrox Solios eCL/XCL

## Camera Interface Application Note


Photonfocus MV-D1024-80-CL-8

October 5, 2006

Basics about the  
interface modes


### Camera Interface Briefs (cont.)

#### Mode 2: Pseudo-continuous

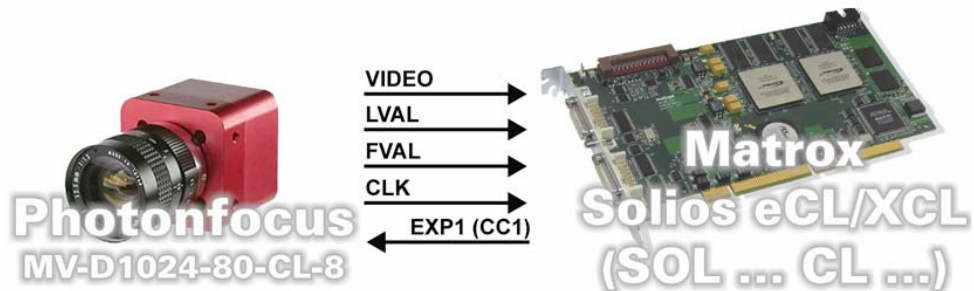

#### Mode 3: Asynchronous reset

- $1024 \times 1024 \times 8$ -bit.
- Camera Link BASE interface (8-bit, dual tap).
- Matrox Solios eCL/XCL receiving external trigger signal.
- Matrox Solios eCL/XCL sending EXPOSURE1 (CC1) signal to camera to initiate and control the exposure.
- Matrox Solios eCL/XCL receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 40 MHz) and video from camera.
- DCF used: [MVD102480CL8\\_1024x1024\\_8bit2tapAsync.DCF](#)

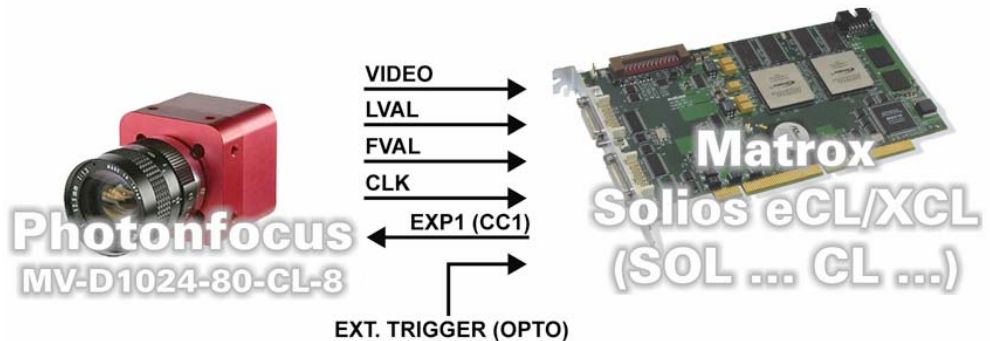

# Matrox Solios eCL/XCL

## Camera Interface Application Note

### Photonfocus MV-D1024-80-CL-8      October 5, 2006

Specifics about the  
interface modes

#### Camera Interface Details

##### Mode 1: Continuous

- **Frame rate:** Matrox Solios eCL/XCL receives the continuous video from the camera at 75 frames per second. To increase the frame rate, reduce exposure time in the PhotonFocus PFRemote Camera Configuration utility (PFRemote.EXE).
- **Exposure time:** Exposure time is determined by the **Exposure Time Field** setting in the PFRemote utility. Refer to the camera manual for more information.
- **Camera settings:** The camera mode is set to the following setting in the PFRemote utility. Refer to the camera manual for more information.

| Mode                | Setting      |
|---------------------|--------------|
| Trigger             | Free Running |
| Output              | 8-bit        |
| Constant Frame Rate | unchecked    |

##### Mode 2: Pseudo-continuous

- **Frame rate:** The frame rate is determined by the frequency of the EXPOSURE1 (CC1) signal.
- **Exposure time:** The EXPOSURE1 (CC1) signal active duration (high to low) initiates and controls the camera's internal exposure time. To modify the exposure time, in Matrox Intellicam change the **Timer 1** value in the DCF or use the MIL MdigControl function. Refer to the MIL on-line Help for more information.
- **Camera settings:** The camera mode is set to the following setting in the PFRemote utility. Refer to the camera manual for more information.

| Mode                      | Setting          |
|---------------------------|------------------|
| Trigger                   | External Trigger |
| Output                    | 8-bit            |
| SYNC Pulse Active High    | checked          |
| Combined trigger/exposure | checked          |
| Constant Frame Rate       | unchecked        |

# Matrox Solios eCL/XCL

## Camera Interface Application Note

### Photonfocus MV-D1024-80-CL-8      October 5, 2006

*Specifics about the  
interface modes*

#### Camera Interface Details (cont.)

##### **Mode 3: Asynchronous Reset**

- **Frame rate:** The frame rate is determined by the frequency of the external trigger signal. The period between the external trigger signals must be larger than the frame readout period and the exposure time.
- **Exposure time:** Refer to Mode 2: Pseudo-continuous.
- **Camera settings:** Refer to Mode 2: Pseudo-continuous.

*Cabling details for the  
interface modes*

#### Cabling Requirements

##### **Mode 1 and 2: Continuous and Pseudo-continuous**

- **Cable and Connection:** Standard Camera Link cable.

##### **Mode 2: Asynchronous reset**

- **Cable and Connection:** Standard Camera Link.
- **External trigger:** External trigger should be connected to the OPTO TRIG input of the 9-pin connector (pins 7 and 2) on the Expanded I/O adapter bracket.

##### **EXPANDED I/O BRACKET (9-pin connector)**

|            |    |   | External Trigger Source |    |
|------------|----|---|-------------------------|----|
| OPTOTRIG + | 07 | ← | SIGNAL                  | -- |
| OPTOTRIG - | 02 | ← | GROUND                  | -- |

The DCFs mentioned in this application note are also attached (embedded) to this PDF file – use the Adobe Reader's View File Attachment to access the DCF files. The information furnished by Matrox Electronics System, Ltd. is believed to be accurate and reliable. Please verify all interface connections with camera documentation or manual. Contact your local sales representative or Matrox Sales office or Matrox Imaging Applications at 514-822-6061 for assistance. © Matrox Electronic Systems Ltd, 2006-2011.

#### **Matrox Electronic Systems Ltd.**

1055 St. Regis Blvd.  
Dorval, Quebec H9P 2T4  
Canada  
Tel: (514) 685-2630  
Fax: (514) 822-6273  
SOL-CID-038

