# 

#### DALSA CL-E1-0512A

#### October 5, 1998

Camera Descriptions	<ul> <li>512 x 8-bit.</li> <li>Single channel RS-422 digital video output.</li> <li>96 TDI stages.</li> <li>External synchronization required.</li> <li>Maximum data rate: 15 MHz.</li> </ul>								
Interface modes	Fixed line scan rate, variable line scan rate								
Camera Interface Briefs	Mode 1: Fixed line scan rate								
	<ul> <li>*Matrox Genesis Main Board with Grab Module</li> <li>512 x 8-bit.</li> <li>**Matrox RS-422 Digital Data Input Board</li> <li>Single channel RS-422 digital video output.</li> <li>DCF configured for 512 lines per virtual frame.</li> <li>Line scan rate is fixed and is determined by frequency of EXSYNC signal.</li> <li>Matrox Genesis sending RS-422 MASTER CLOCK (MCLK) and RS-422 EXPOSURE1 (EXSYNC) signals to camera; the EXPOSURE1 (EXSYNC) signal initiates line readout.</li> <li>Matrox Genesis receiving RS-422 PIXEL CLOCK (STROBE @ 15 MHz), RS-422 HSYNC (LVAL) and video signals from camera; a high LVAL signal indicates valid pixels.</li> <li>DCF used: CLE1DL2.DCF</li> </ul>								
	Mode 2: Variable line scan rate								
	<ul> <li>*Matrox Genesis Main Board with Grab Module</li> <li>Single channel RS-422 digital video output.</li> <li>DCF configured for 512 lines per virtual frame.</li> <li>Line scan rate is variable and is controlled by external trigger signal.</li> <li>Matrox Genesis receiving TTL external trigger.</li> <li>Matrox Genesis sending RS-422 MASTER CLOCK (MCLK) and RS-422 EXPOSURE1 (EXSYNC) signals to camera; the EXPOSURE1 (EXSYNC) initiates line readout.</li> <li>Matrox Genesis receiving RS-422 PIXEL CLOCK (STROBE @ 15 MHz), RS-422 HSYNC (LVAL) and video signals from camera; a high LVAL signal indicates valid pixels.</li> <li>DCF used: CLE1DAL2.DCF</li> </ul>								

# 

#### DALSA CL-E1-0512A

Г

Т

### October 5, 1998

Camera	Mode 1: Fixed line scan rate							
Interface Details	• Matrox Genesis sends the EXPOSURE1 (EXSYNC) signal to the camera; the camera awaits the rising edge of the EXPOSURE1 (EXSYNC) signal and after a short (constant) delay initiates line readout.							
	• Line rate: The EXPOSURE1 (EXSYNC) period in the DCF specifies the line rate of the camera. The EXPOSURE1 (EXSYNC) period is currently set to <b>592 pixels</b> . With a <b>15</b> MHz pixel clock this translates to a <b>25.34 kHz</b> line rate.							
	• <b>Exposure time</b> : The time between the rising edges of the EXPOSURE1 (EXSYNC) signal is the exposure time. The default exposure time for this DCF is <b>39.5</b> $\mu$ s. In order to select the exposure time, the width and deployment time of EXPOSURE1 (EXSYNC) must be set in Matrox Intellicam. The exposure time of the camera can be modified in the DCF using Matrox Intellicam, Genesis Native Library function <b>imCamControl</b> () or with the MIL digitizer control function <b>MdigControl</b> (). Refer to the appropriate manual or user guide for additional information.							
	• Maximum / minimum exposure time: Since the Matrox Genesis timer is 16-bit wide, the							
	maximum exposure time is calculated to be $65536/15$ MHz = <b>4.37 ms</b> . The maximum line rate							
	of the camera is $25.34 \text{ kHz}$ , therefore the minimum exposure time is $39.5 \mu s$ .							
	• <b>Smallest exposure time increment</b> : The pixel clock is the reference clock that the exposure time is being set by. The smallest increment of the exposure time is <b>66.7 ns</b> .							
	Exposure Time = 39.5 μs							
	◄							
	Exposure1 (EXSYNC)							
	Video Valid							
	= 34.1 µs Mode 2 : Variable line scan rate							
	• Once it has received the external trigger signal, Matrox Genesis sends the EXPOSURE1							
	<ul> <li>Once it has received the external trigger signal, Mattox Genesis sends the EXFOSORET (EXSYNC) signal to the camera. A short (variable) delay will follow after receiving the EXPOSURE1 (EXSYNC), followed by the camera sending the HSYNC (LVAL) signal to the Matrox Genesis to initiate line readout.</li> <li>Line rate: The Line rate is variable and controlled by the frequency of the external trigger</li> </ul>							
	signal.							
	• <b>Exposure time</b> : Since the EXPOSURE1 (EXSYNC) signal is controlled by the external trigger signal, the time between the rising edges of the external trigger signal is the exposure time.							

#### 

#### DALSA CL-E1-0512A

## October 5, 1998

Camera Interface Details	• Maximum / minimum exposure time: The maximum exposure time is equal to maximum delay between rising edges of the external trigger signal. The minimum exposure time is $39.5 \ \mu s$ .								
(continued)	TTL external	trigger –							
	Exposure Time								
	HSYNC (LVA	L) _		o Valid 8.3 μs					
Cabling	Mode 1: Fix	ed line scan r	ate						
Requirements	<ul> <li>Matrox cable kit (GEN-TO-DALSA/16) is available for this mode as an alternative to custom cable development based on the pin-outs listing below.</li> <li>Connections between the 20-pin dual row connector (labeled <b>OS1</b>) of the camera and th 100-pin connector of the GEN-DIG-BRD/R are as follows:</li> </ul>								
	DALSA CL-E1-0512A (20-pin dual row connector - OS1)			GEN-DIG-BRD/R (GEN/CBL/OPEN connect	tor)				
	Pin name	Pin no.		Pin name	Pin no.				
	D7	01	$\rightarrow$	DATA, INPUT, 7+	15				
	D7B	02	$\rightarrow$	DATA, INPUT, 7-	16				
	D6	03	$\rightarrow$	DATA, INPUT, 6+	13				
	D6B	04	$\rightarrow$	DATA, INPUT, 6-	14				
	D5	05	$\rightarrow$	DATA, INPUT, 5+	11				
	D5B	06	$\rightarrow$	DATA, INPUT, 5-	12				
	D4	07	$\rightarrow$	DATA, INPUT, 4+	09				
	D4B	08	$\rightarrow$	DATA, INPUT, 4-	10				
	D3	09	$\rightarrow$	DATA, INPUT, 3+	07				
	D3B	10	$\rightarrow$	DATA, INPUT, 3-	08				
	D2	11	$\rightarrow$	DATA, INPUT, 2+	05				
	D2B	12	$\rightarrow$	DATA, INPUT, 2-	06				
	D1	13	$\rightarrow$	DATA, INPUT, 1+	03				
	D1B	14	$\rightarrow$	DATA, INPUT, 1-	04				
	D0	15	$\rightarrow$	DATA, INPUT, 0+	01				
	DOB	16	$\rightarrow$	DATA, INPUT, 0-	02				
	STROBE	17	$\rightarrow$	CLOCK, INPUT, -	40*				
	STROBEB	18	$\rightarrow$	CLOCK, INPUT, +	39*				
	LVAL	19	$\rightarrow$	HSYNC, INPUT, +	33				
	LVALB	20	$\rightarrow$	HSYNC, INPUT, -	34				

\*Note these signals are intentionally reversed since data from the camera is clocked on the falling edge of the STROBE signal, and Matrox Genesis is clocked on the rising edge.

#### T R O X A **GENESIS**

Μ

#### DALSA CL-E1-0512A

#### October 5, 1998

Cabling Requirements	• Connections between the DB-25 connector on the rear panel of the camera and the 100-pin connector of the GEN-DIG-BRD/R are as follows:								
(continued)	DALSA CL-E1-0512A			GEN-DIG-BRD/R					
	(DB-25 male connector) Pin name Pin no.			(GEN/CBL/OPEN connector) Pin name Pin no.					
	MCLK	06		<i>Pin name</i> CLOCK, OUTPUT, +	<i>F in no.</i> 89				
			<i>←</i>						
	MCLKB EXSYNC	19 17	$\leftarrow$	CLOCK, OUTPUT, -	90 95				
		17	$\leftarrow$	EXPOSURE, OUTPUT, 1+					
	EXSYNCB	04	$\leftarrow$	EXPOSURE, OUTPUT, 1-	96 50*				
	GROUND	07		GROUND	50* 27*				
	GROUND	11		GROUND	37*				
	GROUND	20		GROUND	38* 50*				
	GROUND	24		GROUND	50*				
	* Any pin can be used at any position: all grounds are connected on the GEN-DIG-BRD/R.								
		Connections between the DB-25 connector on the rear panel of the camera and the power							
	supply are as								
		SA CL-E1-0512A							
		-25 male connect		POWER SUPPLY					
	Pin		name						
	8	+5V		+5V					
	9	+15\							
	12	–5V +5V		7					
	13 21	+5 \ +15 \							
	21	+15V -5V		+15V -5V					
	22	_5v _15\							
		7, 20, 24 Grou		Ground					
	,	, 20, 21 0.00							
	<b>NOTE:</b> it is very important that all the GROUNDs of the camera be connected toge the POWER SUPPLY GROUND, and to the GROUND of the Matrox Genesis. Do n the cable shield as a ground, instead always use the ground pin of the power supply.								
	Mode 2: Variable line scan rate								
	required for di • TTL external TO-5BNC cat	igital data, synch trigger source sh	ronization and ould be connec	external trigger source and Gl control signals in RS-422 forr cted to the TTL trigger input of d line scan rate	nat.				

The DCF(s) mentioned in this application note can be found on the MIL and Native Library CD, or our FTP site (ftp.matrox.com). The information furnished by Matrox Electronics System, Ltd. is believed to be accurate and reliable. Please verify all interface connections with camera documentation or manual. Contact your local sales representative or Matrox Sales office or Matrox Imaging Applications at 514-822-6061 for assistance.

Corporate Headquarters: Canada and U.S.A. Matrox Electronic Systems Ltd. 1055 St.Regis Blvd. Dorval, Quebec, Canada H9P 2T4 Tel: (514) 685-7230 Fax: (514) 822-6273

