

# Matrox Odyssey Xpro

## Camera Interface Application Note

### UNIQ UP-2000CL

June 4, 2009

Basics about the  
camera

#### Camera Descriptions

- Effective resolution:  $1620 \times 1236 \times 10\text{-bit}$  @ 16 fps.
- Camera Link BASE interface (single tap).
- Progressive scan.
- Internal sync.
- Internal or external exposure control.
- 40 MHz pixel clock rate.


#### Interface Mode

- Continuous (Free Running)
- Pseudo-continuous (Pulse Width Trigger Mode)
- Asynchronous reset (Pulse Width Trigger Mode)

#### Camera Interface Briefs

##### Mode 1: Continuous

- $1620 \times 1236 \times 10\text{-bit}$  @ 16 fps.
- Camera Link BASE interface (single tap).
- Matrox Odyssey Xpro receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 40 MHz) and video from camera.
- DCF used: [UP-2000CL\\_1620x1236\\_10bitCon.DCF](#)

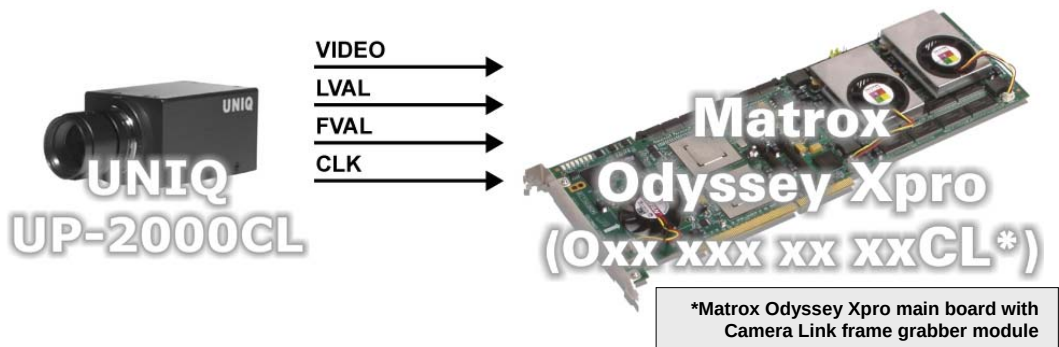

##### Mode 2: Pseudo-continuous

- $1620 \times 1236 \times 10\text{-bit}$ .
- Camera Link BASE interface (single tap).
- Matrox Odyssey Xpro sending EXPOSURE1 (CC2) signal to camera to initiate and control the exposure.
- Matrox Odyssey Xpro receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 40 MHz) and video from camera.
- DCF used: [UP-2000CL\\_1620x1236\\_10bitPcon.DCF](#)

Continued...

Mode of operations as  
per Matrox Imaging (in  
parentheses as per  
camera manufacturer)

Basics about the  
interface modes

# Matrox Odyssey Xpro

## Camera Interface Application Note


### UNIQ UP-2000CL

June 4, 2009

Basics about the  
interface modes


#### Camera Interface Briefs (cont.)

##### Mode 2: Pseudo-continuous

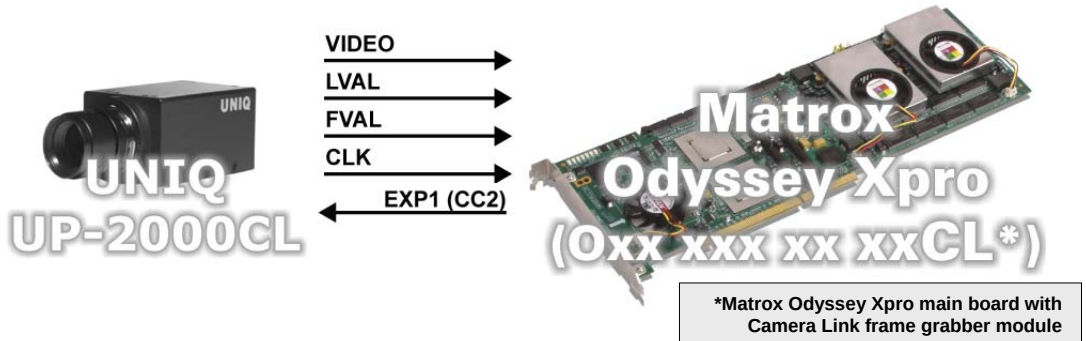

##### Mode 3: Asynchronous reset

- 1620 × 1236 × 10-bit.
- Camera Link BASE interface (single tap).
- Matrox Odyssey Xpro receiving external trigger signal.
- Matrox Odyssey Xpro sending EXPOSURE1 (CC2) signal to camera to initiate and control the exposure.
- Matrox Odyssey Xpro receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 40 MHz) and video from camera.
- DCF used: [UP-2000CL\\_1620x1236\\_10bitAsync.DCF](#)

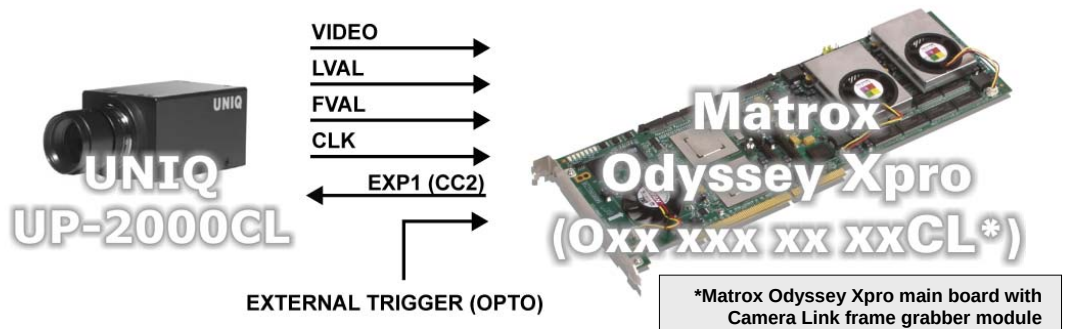

Specifics about the  
interface modes

#### Camera Interface Details

##### Mode 1: Continuous

- **Frame rate:** Matrox Odyssey Xpro receives the continuous video from the camera at 16 frames per second.
- **Exposure time:** Exposure time is fixed and cannot be changed. Refer to the camera manual for more information.
- **Camera settings:** The camera mode is set to **Normal Mode**.

Continued...

# Matrox Odyssey Xpro

## Camera Interface Application Note

### UNIQ UP-2000CL

June 4, 2009

Specifics about the  
interface modes

#### Camera Interface Details

##### Mode 2: Pseudo-continuous

- **Frame rate:** The frame rate is determined by the frequency of the EXPOSURE1 (CC2) signal.
- **Exposure time:** The EXPOSURE1 (CC2) signal active duration initiates and controls the camera's exposure time. To modify the exposure time, in Matrox Intellicam change the **Timer 1** active duration in the DCF or use the MIL MdigControl function. Refer to the MIL on-line Help for more information.
- **Camera settings:** The camera mode is set to **Asynchronous Mode** shutter mode is set to **0x0F**.

##### Mode 3: Asynchronous Reset

- **Frame rate:** The frame rate is determined by the frequency of the external trigger signal. The period between the external trigger signals must be larger than the frame readout period plus the exposure time.
- **Exposure time:** Refer to Mode 2: Pseudo-continuous.
- **Camera settings:** Refer to Mode 2: Pseudo-continuous.

#### Cabling Requirements

##### Mode 1 and 2: Continuous and Pseudo-continuous

- **Cable and Connection:** Standard Camera Link cable.

##### Mode 3: Asynchronous reset

- **Cable and Connection:** Standard Camera Link cable.
- **External trigger:** External trigger should be connected to the OPTO TRIG input of the 9-pin connector (pins 7 and 2) on the Expanded I/O adapter bracket.

##### EXPANDED I/O BRACKET (9-pin connector)

|            |    | External Trigger Source |           |
|------------|----|-------------------------|-----------|
| OPTOTRIG + | 07 | ←                       | SIGNAL -- |
| OPTOTRIG - | 02 | ←                       | GROUND -- |

Cabling details for the  
interface modes

The DCFs mentioned in this application note are also attached (embedded) to this PDF file – use the Adobe Reader's View File Attachment to access the DCF files. The information furnished by Matrox Electronic System, Ltd. is believed to be accurate and reliable. Please verify all interface connections with camera documentation or manual. Contact your local sales representative or Matrox Sales office or Matrox Imaging Applications at 514-822-6061 for assistance. © Matrox Electronic Systems Ltd, 2009-2011.

#### Matrox Electronic Systems Ltd.

1055 St. Regis Blvd.  
Dorval, Quebec H9P 2T4  
Canada  
Tel: (514) 685-2630  
Fax: (514) 822-6273  
ODY-CID-286

