

Matrox Odyssey Xpro

Camera Interface Application Note

PULNiX TM-4000CL

February 3, 2004

Basics about the
camera

Mode of operations as
per Matrox Imaging (in
parentheses as per
camera manufacturer)

Basics about the
interface modes

Camera Descriptions

- Effective resolution: $2048 \times 2048 \times 8\text{-bit}$ @ 15 fps.
- Camera Link BASE interface (Dual tap).
- Progressive scan.
- Internal sync.
- Internal or external exposure control.
- 40 MHz pixel clock rate.

Interface Mode

- Continuous
- Pseudo-continuous
- Asynchronous reset (Pulse width control)

Camera Interface Briefs

Mode 1: Continuous


- $2048 \times 2048 \times 8\text{-bit}$ @ 15 fps.
- Camera Link BASE interface (Dual tap).
- Progressive scan.
- Matrox Odyssey Xpro receiving LDV, FDV, CLK and video signal from camera.
- DCF used: [TM4000CL2048x2048Con.DCF](#)



*Matrox Odyssey Xpro main board
with Camera Link grab module

Mode 2: Pseudo-continuous

- $2048 \times 2048 \times 8\text{-bit}$.
- Camera Link BASE interface (Dual tap).
- Progressive scan.
- Matrox Odyssey Xpro sending periodic EXPOSURE1 (CC1) signal to camera to initiate and control exposure time.
- Matrox Odyssey Xpro receiving LDV, FDV, CLK and video signal from camera.
- DCF used: [TM4000CL2048x2048Pcon.DCF](#)

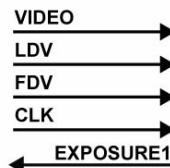

*Matrox Odyssey Xpro main board
with Camera Link grab module

Matrox Odyssey Xpro

Camera Interface Application Note

PULNiX TM-4000CL


February 3, 2004

Basics about the
interface modes

Camera Interface Briefs (cont.)

Mode 3: Asynchronous reset

- 2048 × 2048 × 8-bit.
- Camera Link BASE interface (Dual tap).
- Progressive scan.
- Matrox Odyssey Xpro receiving external trigger signal.
- Matrox Odyssey Xpro sending EXPOSURE1 (CC1) signal to camera to initiate and control exposure time.
- Matrox Odyssey Xpro receiving LDV, FDV, CLK and video signal from camera.
- DCF used: [TM4000CL2048x2048Async.DCF](#)

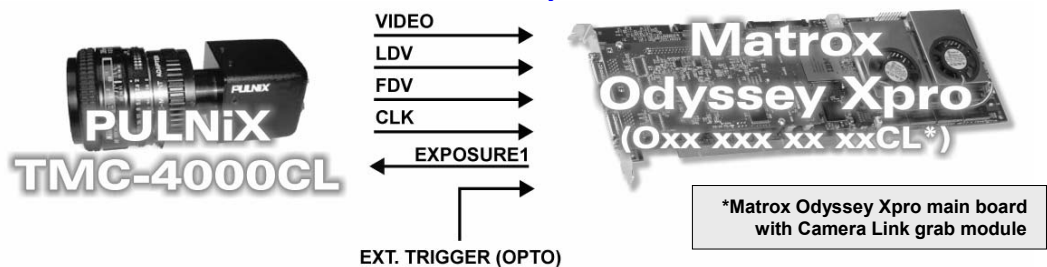

Specifics about the
interface modes

Camera Interface Details

Mode 1: Continuous

- **Frame Rate:** Matrox Odyssey Xpro receives the continuous video from the camera at 15 frames per second.
- **Exposure time:** Exposure time is determined by the shutter setting. Refer to the camera manual for more information.
- **Camera control settings:** AccuPiXEL Dual-Tap camera control software version 2.0 or higher can be used.

Control	Setting
Shutter Mode	Manual
Shutter Switch	0 (default)

Mode 2: Pseudo-continuous

- **Frame Rate and Exposure Time:** Frame rate is determined by the EXPOSURE1 (CC1) setting in the DCF. Changing the frequency (delay period) will control the frame rate, while changing the width (falling edge to rising edge) of EXPOSURE1 (CC1) will control the frame rate as well as exposure time. The frame rate and exposure time can be modified using Matrox Intellicam, with the ONL imCamControl() or imDigControl() function, or with the MIL MdigControl() function. Refer to the respective manual for more information.

Continued...

Matrox Odyssey Xpro

Camera Interface Application Note

PULNiX TM-4000CL

February 3, 2004

Specifics about the
interface modes

Camera Interface Details (cont.)

Mode 2: Pseudo-continuous

- **Camera control settings:** AccuPIXEL Dual-Tap camera control software version 2.0 or higher can be used.

Control	Setting
Shutter Mode	ASYNCR (external pulse width)
Shutter Switch	9

Mode 3: Asynchronous reset

- **Frame Rate:** The frame rate is determined by the frequency of the external trigger signal as well as the width (falling edge to rising edge) of EXPOSURE1 (CC1).
- **Exposure time:** The width (falling edge to rising edge) of the EXPOSURE1 (CC1) signal is the exposure time. The exposure time can be modified using Matrox Intellicam, ONL imCamControl() or imDigControl() function, or with the MIL MdigControl() function. Refer to the respective manual for more information.
- **Camera control settings:** AccuPIXEL Dual-Tap camera control software version 2.0 or higher can be used.

Control	Setting
Shutter Mode	ASYNCR (external pulse width)
Shutter Switch	9

Cabling details for the
interface modes

Cabling Requirements

Modes 1 and 2: Continuous and Pseudo-continuous

- **Cable and Connection:** Standard Camera Link cable.

Mode 3: Asynchronous reset

- **Cable and Connection:** Standard Camera Link.
- **External trigger:** External trigger should be connected to the OPTO TRIG input of the 9-pin connector (pins 7 and 2) on the Expanded I/O adapter bracket.

EXPANDED I/O BRACKET (9-pin connector)

		External Trigger Source	
OPTOTRIG +	07	←	SIGNAL --
OPTOTRIG -	02	←	GROUND --

The DCFs mentioned in this application note are also attached (embedded) to this PDF file – use the Adobe Reader's View File Attachment to access the DCF files. The information furnished by Matrox Electronic Systems, Ltd. is believed to be accurate and reliable. Please verify all interface connections with camera documentation or manual. Contact your local sales representative or Matrox Sales office or Matrox Imaging Applications at 514-822-6061 for assistance. © Matrox Electronic Systems Ltd, 2004-2011.

Matrox Electronic Systems Ltd.

1055 St. Regis Blvd.
Dorval, Quebec H9P 2T4
Canada
Tel: (514) 685-2630
Fax: (514) 822-6273
ODY-CID-057

