

Matrox Odyssey Xpro

Camera Interface Application Note

Sentech STC-CL232A

June 25, 2009

Basics about the
camera

Camera Descriptions

- Effective resolution: $1628 \times 1236 \times 10\text{-bit}$ @ 30 fps.
- Camera Link BASE interface (Dual tap).
- Progressive scan.
- Internal sync.
- Internal or external exposure control.
- 73.636 MHz pixel clock rate.

Interface Mode

- Continuous (Continuous mode)
- Pseudo-continuous (Pulse Width - Trigger Mode)
- Asynchronous reset (Pulse Width - Trigger Mode)


Mode of operations as
per Matrox Imaging (in
parentheses as per
camera manufacturer)

Camera Interface Briefs

Mode 1: Continuous

- $1620 \times 1220 \times 10\text{-bit}$ @ 30 fps.
- Camera Link BASE interface (Dual tap).
- Matrox Odyssey Xpro receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 73.636 MHz) and video from camera.
- DCF used: [STCCL232A_1620x1220_10bitCon.DCF](#)

Basics about the
interface modes

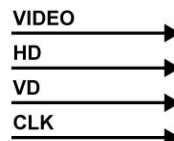

Mode 2: Pseudo-continuous

- $1620 \times 1220 \times 10\text{-bit}$.
- Camera Link BASE interface (Dual tap).
- Matrox Odyssey Xpro sending a periodic TIMER1 OUT (CC1) signal to camera to initiate the exposure.
- Matrox Odyssey Xpro receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 73.636 MHz) and video from camera.
- DCF used: [STCCL232A_1620x1220_10bitPcon.DCF](#)

*Matrox Odyssey Xpro main board with Single-FULL or BASE Camera Link module

Matrox Odyssey Xpro

Camera Interface Application Note


Sentech STC-CL232A

June 25, 2009

Basics about the
interface modes

Camera Interface Briefs (cont.)


Mode 2: Pseudo-continuous

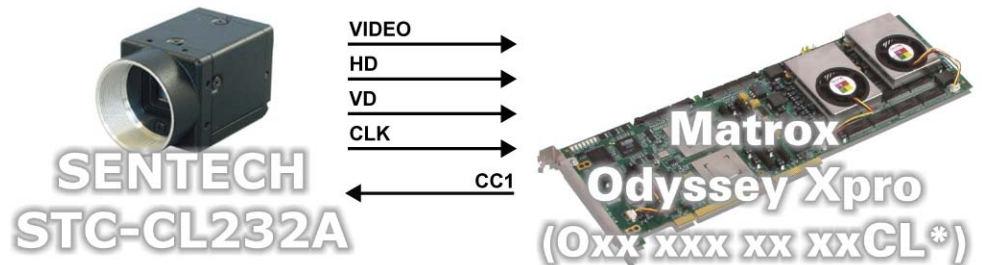

*Matrox Odyssey Xpro main board with Single-FULL or BASE Camera Link module

Mode 3: Asynchronous Reset

- 1620 × 1220 × 10-bit.
- Camera Link BASE interface (Dual tap).
- Matrox Odyssey Xpro receiving external trigger signal.
- Matrox Odyssey Xpro sending TIMER1 OUT (CC1) signal to camera to initiate the exposure.
- Matrox Odyssey Xpro receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 73.636 MHz) and video from camera.
- DCF used: [STCCL232A_1620x1220_10bitAsync.DCF](#)

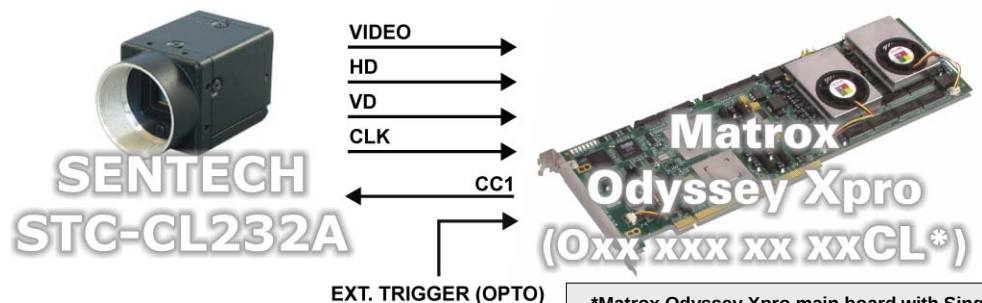

*Matrox Odyssey Xpro main board with Single-FULL or BASE Camera Link module

Specifics about the
interface modes

Camera Interface Details

Mode 1: Continuous

- **Frame rate:** Matrox Odyssey receives the continuous video from the camera at up to 30 frames per second.
- **Exposure time:** Exposure time is set using the integration time setting in the Camera Configuration utility. Refer to the camera manual for more information.

Continued...

Matrox Odyssey Xpro

Camera Interface Application Note

Sentech STC-CL232A

June 25, 2009

*Specifics about the
interface modes*

Camera Interface Details

Mode 1: Continuous

- **Camera control settings:** Use the Sentech CLCtrl Camera Configuration Utility to set the following modes:

Shutter Section:
Trigger Mode: Edge Preset
Mode Section:
Trigger Reset Mode: Non-Reset
Continue/Trigger Shutter Mode Manual Selection: Trigger Shutter Mode
Output Format Selection: 10 bit

Mode 2: Pseudo-continuous

- **Frame rate:** The frame rate is determined by the frequency of the TIMER1 OUT (CC1) signal.
- **Exposure time:** The width (rising edge to falling edge) of the TIMER1 OUT (CC1) signal is the exposure time, which can be modified in the DCF using Matrox Intellicam, with the ONL imCamControl() or imDigControl() function, or with the MIL MdigControl() function. Consult the respective manual for more information.
- **Camera control settings:** Use the Sentech CLCtrl Camera Configuration Utility to set the following modes:

Shutter Section:
Trigger Mode: Pulse Width
Mode Section:
Trigger Reset Mode: V-Reset
Continue/Trigger Shutter Mode Manual Selection: Trigger Shutter Mode
Output Format Selection: 10 bit

Mode 3: Asynchronous Reset

- **Frame rate:** The frame rate is determined by the frequency of the external trigger signal. The period between the external trigger signals must be larger than the frame readout period plus the exposure time.
- **Exposure time:** Refer to Mode 2: Pseudo-continuous.
- **Camera settings:** Refer to Mode 2: Pseudo-continuous.

Matrox Odyssey Xpro

Camera Interface Application Note

Sentech STC-CL232A

June 25, 2009

Cabling details for the
interface modes

Cabling Requirements

Modes 1 and 2: Continuous and Pseudo-continuous

- **Cable and Connection:** One Mini-Camera Link cable.

Mode 3: Asynchronous reset

- **Cable and Connection:** One Mini-Camera Link cable.
- **External trigger:** External trigger should be connected to the OPTO TRIG input of the 9-pin connector on the Expanded I/O adapter bracket.

EXPANDED I/O BRACKET (9-pin connector)

			External Trigger Source	
OPTOTRIG +	07	←	SIGNAL	--
OPTOTRIG -	02	←	GROUND	--

The DCFs mentioned in this application note are also attached (embedded) to this PDF file – use the Adobe Reader's View File Attachment to access the DCF files. The information furnished by Matrox Electronics System, Ltd. is believed to be accurate and reliable. Please verify all interface connections with camera documentation or manual. Contact your local sales representative or Matrox Sales office or Matrox Imaging Applications at 514-822-6061 for assistance. © Matrox Electronic Systems Ltd, 2009-2011.

Matrox Electronic Systems Ltd.

1055 St. Regis Blvd.
Dorval, Quebec H9P 2T4
Canada
Tel: (514) 685-2630
Fax: (514) 822-6273
ODY-CID-296

