

Matrox Solios eA/XA

Camera Interface Application Note

JAI CV-A2

August 1, 2006

*Basics about the
camera*

*Mode of operations as
per Matrox Imaging (in
parentheses as per
camera manufacturer)*

*Basics about the
interface modes*

Camera Descriptions

- Effective resolution: $1620 \times 1220 \times 8\text{-bit}$ @ 15 fps.
- Single channel analog video output.
- Progressive scan.
- External or internal sync.
- External or internal exposure control.
- 36.15 MHz pixel clock rate.


Interface Modes

- Continuous
- Asynchronous reset (Pulse width control)

Camera Interface Briefs

Mode 1: Continuous

- $1620 \times 1220 \times 8\text{-bit}$ @ 15 fps.
- Single channel analog video.
- Progressive scan.
- Matrox Solios eA/XA receiving video from camera.
- DCF used: [CVA2_1620x1220Con.DCF](#)

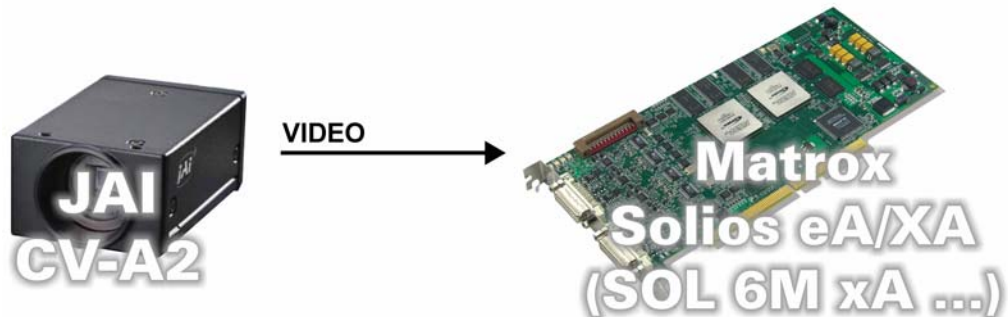

Mode 2: Asynchronous Reset

- $1620 \times 1220 \times 8\text{-bit}$.
- Single channel analog video.
- Progressive scan.
- Matrox Solios eA/XA receiving external trigger signal.
- Matrox Solios eA/XA sending TIMER1 (TRIGGER INPUT) signal to camera to initiate and control the exposure.
- Matrox Solios eA/XA receiving video from camera.
- DCF used: [CVA2_1620x1220Async.DCF](#)

Continued...

Matrox Solios eA/XA

Camera Interface Application Note


JAI CV-A2

August 1, 2006

Basics about the
interface modes

Camera Interface Briefs (continued)

Mode 2: Asynchronous Reset

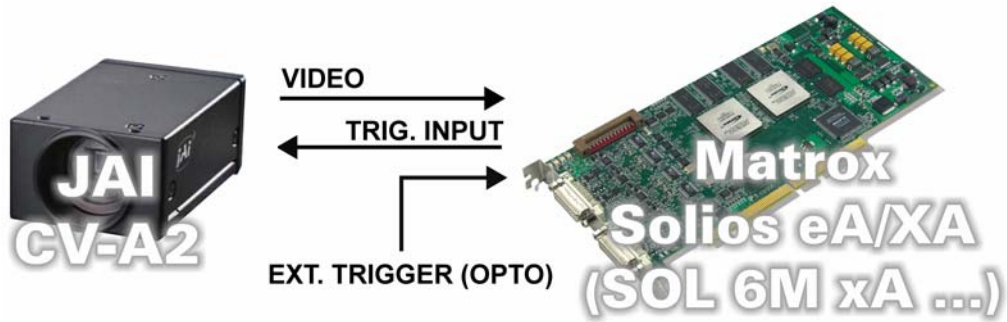

Specifics about the
interface modes

Camera Interface Details

Mode 1: Continuous

- **Frame Rate:** Matrox Solios eA/XA receives the continuous video from the camera at 30 frames per second.
- **Exposure time:** Exposure time is determined by the camera's shutter setting. Refer to the camera manual for more information.
- **Camera control:** Use default settings in the CV-A2 Camera Control Tool. Refer to the camera manual for more information.

Mode 2: Asynchronous Reset

- **Frame rate:** The frame rate is determined by the frequency of the external trigger signal and the exposure time period.
- **Exposure time:** The time between the falling edge and the rising edge of the TIMER1 (TRIGGER INPUT) signal is the exposure time, which can be changed in the DCF by modifying Timer1 in Matrox Intellicam or with the MIL MdigControl() function. Consult the respective manual for more information.
- **Camera control:** **Trigger Mode** set to **Pulse Width Control** (Shutter and Sync Signals menu) in the CV-A2 Camera Control Tool. Refer to the camera manual for more information:

Cabling details for the
interface modes

Cabling Requirements

Mode 1: Continuous

- **Cable and Connection:** DVI-TO-8BNC/O (open end) cable required for video signal. The connection between the 12-pin connector of the camera and the Matrox Solios eA/XA are as follow:

Matrox Solios eA/XA

(DVI analog input connector-0)

JAI CV-A2

(12-pin connector)

Pin name

Pin no.

Pin name

Pin no.

CH0_INPUTA

C1

←

VIDEO

04

Matrox Solios eA/XA

Camera Interface Application Note

JAI CV-A2

August 1, 2006

*Cabling details for the
interface modes*

Cabling Requirements

Mode 2: Asynchronous reset

- **Cable and Connection:** DVI-TO-8BNC/O (open end) cable required for video signal. The connection between the 12-pin connector of the camera and the Matrox Solios eA/XA are as follow:

Matrox Solios eA/XA

(DVI analog input connector-0)

JAI CV-A2

(12-pin connector)

Pin name	Pin no.		Pin name	Pin no.
CH0_INPUTA	C1	←	VIDEO	04
CH0_EXPOSURE	23	→	TRIGGER INPUT	11

- **External trigger:** External trigger should be connected to the OPTO TRIG input of the 9-pin connector (pins 2 and 7) on the external trigger input connector 1 (cable adapter board).

External trigger input

(9-pin connector)

External Trigger Source

OPTO TRIG+	07	←	SIGNAL	--
OPTO TRIG-	02	←	GROUND	--

The DCF(s) mentioned in this application note can be found on our FTP site ([ftp.matrox.com/pub/imaging/](ftp://ftp.matrox.com/pub/imaging/)). The information furnished by Matrox Electronics System, Ltd. is believed to be accurate and reliable. Please verify all interface connections with camera documentation or manual. Contact your local sales representative or Matrox Sales office or Matrox Imaging Applications at 514-822-6061 for assistance. © Matrox Electronic Systems Ltd., 2006-2011.

Matrox Electronic Systems Ltd.

1055 St. Regis Blvd.
Dorval, Quebec H9P 2T4
Canada
Tel: (514) 685-2630
Fax: (514) 822-6273

SOL-CID-017

