

# Matrox Radiant eCL

## Camera Interface Application Note

Vieworks VC2-3M280-MC10

November 8, 2011

### Basics about the camera

#### Camera Descriptions

- Effective resolution:  $1696 \times 1710 \times 8\text{-bit}$  @ up to 284 fps.
- Camera Link FULL interface (8 or 10 tap).
- Progressive scan.
- Internal sync., Internal or external exposure control.
- 85 MHz pixel clock rate.

### Mode of operations as per Matrox Imaging (in parentheses as per camera manufacturer)

#### Interface Mode


- Continuous (Continuous Mode)
- Pseudo-continuous (Pulse Width Trigger Mode)
- Asynchronous reset (Pulse Width Trigger Mode)

### Basics about the interface modes

#### Camera Interface Briefs

##### Mode 1: Continuous

- $1696 \times 1710 \times 8\text{-bit}$  @ up to 284 fps.
- Camera Link FULL interface (8 or 10 tap).
- Matrox Radiant eCL receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 85 MHz) and video from camera.
- DCF used: [VC2-3M280-MC10\\_2048x2048\\_8bit8tapCon.DCF](#)
- DCF used: [VC2-3M280-MC10\\_2048x2048\\_8bit10tapCon.DCF](#)

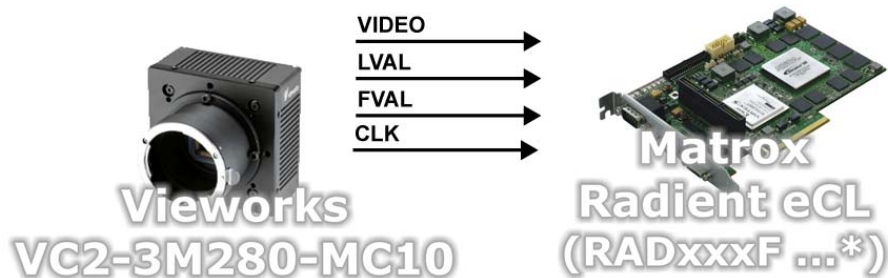

# Matrox Radiant eCL

## Camera Interface Application Note

Vieworks VC2-3M280-MC10


November 8, 2011

Basics about the interface modes

### Camera Interface Briefs (cont.)


#### Mode 2: Pseudo-continuous

- $1696 \times 1710 \times 8$ -bit.
- Camera Link FULL interface (8 or 10 tap).
- Matrox Radiant eCL sending TIMER 1 OUT (CC1) signal to camera to initiate and control the exposure. Matrox Radiant eCL receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 85 MHz) and video from camera.
- DCF used: [VC2-3M280-MC10\\_2048x2048\\_8bit8tapPcon.DCF](#)
- DCF used: [VC2-3M280-MC10\\_2048x2048\\_8bit10tapPcon.DCF](#)

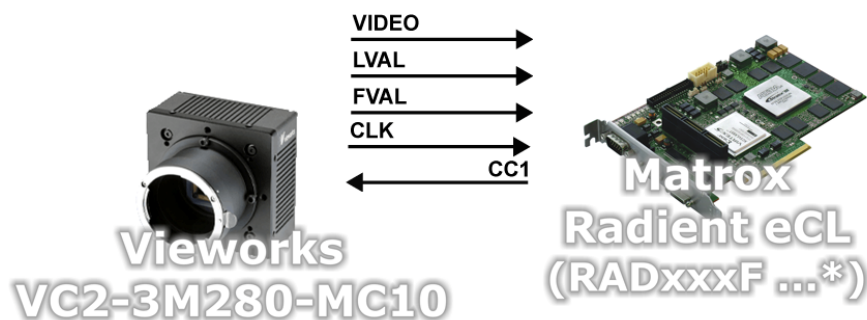

#### Mode 3: Asynchronous reset

- $2048 \times 2048 \times 8$ -bit.
- Camera Link FULL interface (8 or 10 tap).
- Matrox Radiant eCL receiving external trigger signal.
- Matrox Radiant eCL sending TIMER 1 OUT (CC1) signal to camera to initiate and control the exposure.
- Matrox Radiant eCL receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 85 MHz) and video from camera.
- DCF used: [VC2-3M280-MC10\\_2048x2048\\_8bit8tapAsync.DCF](#)
- DCF used: [VC2-3M280-MC10\\_2048x2048\\_8bit10tapAsync.DCF](#)

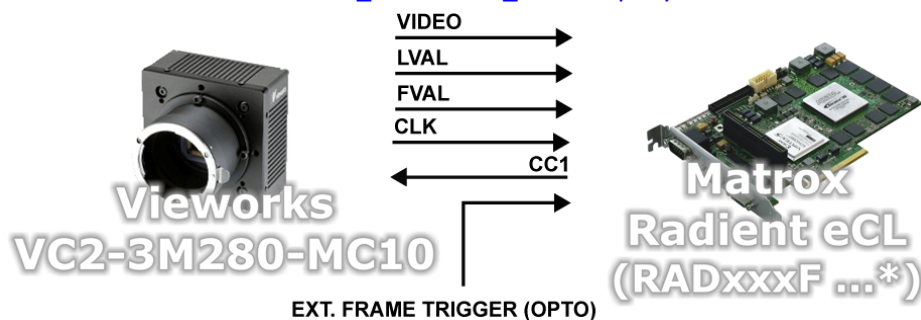

# Matrox Radiant eCL

## Camera Interface Application Note

Vieworks VC2-3M280-MC10

November 8, 2011

*Specifics about the interface modes*

### Camera Interface Details

#### *Mode 1: Continuous*

- **Frame rate:** Matrox Radiant eCL receives the continuous video from the camera at up to 284 frames per second.
- **Exposure time:** Exposure time is set using Vieworks configuration utility. Refer to the camera manual for more information.
- **Camera control settings:** Set the camera using the Vieworks configuration utility to VIEW | Camera Link output | 8 or 10 Tap, Data Bit 8 bit.

#### *Mode 2: Pseudo-continuous*

- **Frame rate:** The frame rate is determined by the frequency of the TIMER1 OUT (CC1) signal.
- **Exposure time:** The TIMER1 OUT (CC1) signal's active duration initiates and controls the exposure time, which can be modified in the DCF using Matrox Intellicam or with the MIL MdigControl() function. Consult the respective manual for more information.
- **Bayer Color Filter:** Refer to Mode 1: Continuous.
- **Camera control settings:** Set the camera using the Vieworks configuration utility to VIEW | Camera Link output | 8 or 10 Tap. Data Bit 8 bit, MODE/EXP | External Sync Exposure: Pulse Width Source CC1 Port Polarity: Active High.

#### *Mode 3: Asynchronous Reset*

- **Frame rate:** The frame rate is determined by the frequency of the external trigger signal. The period between the external trigger signals must be larger than the frame readout period plus the exposure time.
- **Exposure time:** Refer to Mode 2: Pseudo-continuous.
- **Camera settings:** Refer to Mode 2: Pseudo-continuous.

*Cabling details for the interface modes*

### Cabling Requirements

#### *Mode 1 and 2: Continuous and Pseudo-continuous*

- **Cable and Connection:** Two Standard-To-Mini Camera Link cables.

# Matrox Radiant eCL

## Camera Interface Application Note

Vieworks VC2-3M280-MC10

November 8, 2011

*Cabling details for the interface  
modes*

### Cabling Requirements (cont.)

#### *Mode 3: Asynchronous Reset*

- **Cable and Connection:** Two Standard-To-Mini Camera Link cables.
- **External trigger:** External trigger should be connected to the external auxiliary I/O (connector A on Matrox Radiant eCL bracket).

#### **EXTERNAL AUX. I/O**

##### **(connector A)**

| PIN NAME       |  | PIN NO. |   | External Trigger Source |         |
|----------------|--|---------|---|-------------------------|---------|
| PIN NAME       |  | PIN NO. |   | PIN NAME                | PIN NO. |
| OPTO_AUX_IN0 + |  | 15      | ← | SIGNAL                  | --      |
| OPTO_AUX_IN0 - |  | 09      | ← | GROUND                  | --      |

The DCFs mentioned in this application note are also attached (embedded) to this PDF file – use the Adobe Reader's View File Attachment to access the DCF files. The information furnished by Matrox Electronics System, Ltd. is believed to be accurate and reliable. Please verify all interface connections with camera documentation or manual. Contact your local sales representative or Matrox Sales office or Matrox Imaging Applications at 514-822-6061 for assistance. © Matrox Electronic Systems Ltd, 2011.

#### **Matrox Electronic Systems Ltd.**

1055 St. Regis Blvd.  
Dorval, Quebec H9P 2T4  
Canada  
Tel: (514) 685-2630  
Fax: (514) 822-6273