

Matrox Odyssey Xpro

Camera Interface Application Note

Sentech STC-CLC232A

April 4, 2011

Basics about the camera

Camera Descriptions

- Effective resolution: $1628 \times 1236 \times 10\text{-bit}$ @ 30 fps.
- Camera Link BASE interface (Dual tap).
- Progressive scan, Bayer color filter.
- Internal sync.
- Internal or external exposure control.
- 73.636 MHz pixel clock rate.

Mode of operations as per
Matrox Imaging (in parentheses
as per camera manufacturer)

Interface Mode


- Continuous (Continuous Mode)
- Pseudo-continuous (Pulse Width Trigger Mode)
- Asynchronous reset (Pulse Width Trigger Mode)

Basics about the interface modes

Camera Interface Briefs

Mode 1: Continuous

- $1620 \times 1220 \times 10\text{-bit}$ @ 30 fps.
- Camera Link BASE interface (Dual tap).
- Matrox Odyssey Xpro receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 73.636 MHz) and video from camera.
- DCF used: [STC-CL232A1620x1220_10bit2TapCon.DCF](#)

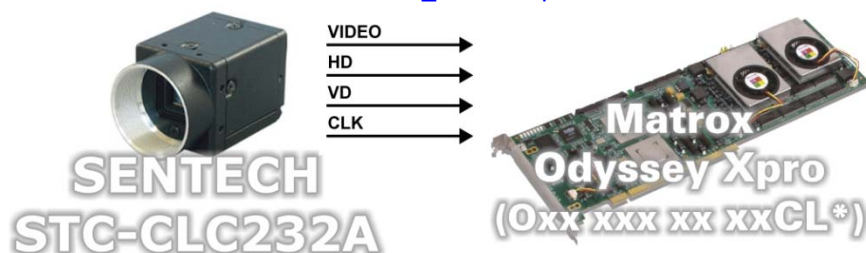

Mode 2: Pseudo-continuous

- $1620 \times 1220 \times 10\text{-bit}$.
- Camera Link BASE interface (Dual tap).
- Matrox Odyssey Xpro sending TIMER 1 OUT (CC1) signal to camera to initiate and control the exposure.
- Matrox Odyssey Xpro receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 73.636 MHz) and video from camera.
- DCF used: [STC-CL232A1620x1220_10bit2TapPcon.DCF](#)

*Matrox Odyssey Xpro main board with single-FULL or BASE Camera Link frame grabber module

Matrox Odyssey Xpro

Camera Interface Application Note


Sentech STC-CLC232A

April 4, 2011

Basics about the interface modes


Camera Interface Briefs (cont.)

Mode 2: Pseudo-continuous

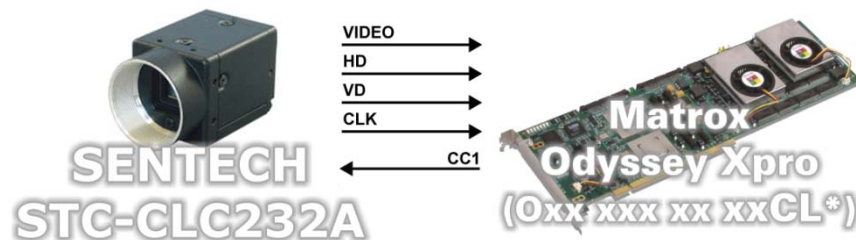

Mode 3: Asynchronous reset

- 1620 × 1220 × 10-bit.
- Camera Link BASE interface (Dual tap).
- Matrox Odyssey Xpro receiving external trigger signal.
- Matrox Odyssey Xpro sending TIMER 1 OUT (CC1) signal to camera to initiate and control the exposure.
- Matrox Odyssey Xpro receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 73.636 MHz) and video from camera.
- DCF used: [STC-CL232A1620x1220_10bit2TapAsync.DCF](#)

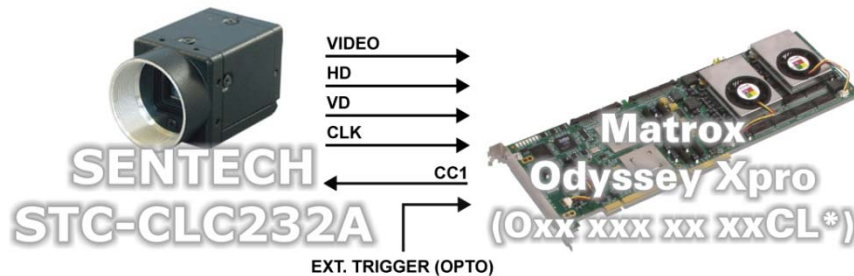

Specifics about the interface modes

Camera Interface Details

Mode 1: Continuous

- **Frame rate:** Matrox Odyssey Xpro receives the continuous video from the camera at 20 frames per second.
- **Exposure time:** Exposure time is set using the integration time setting in the Camera Configuration utility. Refer to the camera manual for more information.

*Matrox Odyssey Xpro main board with single-FULL or BASE Camera Link frame grabber module

Matrox Odyssey Xpro

Camera Interface Application Note

Sentech STC-CLC232A

April 4, 2011

Specifics about the interface modes

Camera Interface Details (cont.)

Mode 1: Continuous

- **Bayer color filter:** Color information is generated by a Bayer color mosaic filter mounted on the sensor. Refer to the MIL online Help for information on using buffers with the Bayer color filter.
- **Camera control settings:** Set the camera using the Sentech CLCtrl Camera Configuration Utility as follows: Trigger Mode = Edge Preset | Trigger Reset Mode = Non-Reset | Shutter Mode = Trigger Shutter Mode | Output Format Selection = 10-bit

Mode 2: Pseudo-continuous

- **Frame rate:** The frame rate is determined by the frequency of the TIMER1 OUT (CC1) signal.
- **Exposure time:** The width (rising edge to falling edge) of the TIMER1 OUT (CC1) signal is the exposure time, which can be modified in the DCF using Matrox Intellicam, with the ONL imCamControl() or imDigControl() function, or with the MIL MdigControl() function. Consult the respective manual for more information.
- **Bayer color filter:** Refer to Mode 1: Continuous.
- **Camera control settings:** Set the camera using the Sentech CLCtrl Camera Configuration Utility as follows: Trigger Mode = Pulse Width | Trigger Reset Mode = V-Reset | Shutter Mode = Trigger Shutter Mode | Output Format Selection = 10-bit

Mode 3: Asynchronous Reset

- **Frame rate:** The frame rate is determined by the frequency of the external trigger signal. The period between the external trigger signals must be larger than the frame readout period plus the exposure time.
- **Exposure time:** Refer to Mode 2: Pseudo-continuous.
- **Bayer color filter:** Refer to Mode 1: Continuous.
- **Camera settings:** Refer to Mode 2: Pseudo-continuous.

Cabling details for the interface modes

Cabling Requirements

Mode 1 and 2: Continuous and Pseudo-continuous

- **Cable and Connection:** One Mini Camera Link cable.

Matrox Odyssey Xpro

Camera Interface Application Note

Sentech STC-CLC232A

April 4, 2011

*Cabling details for the interface
modes*

Cabling Requirements (cont.)

Mode 3: Asynchronous Reset

- **Cable and Connection:** One Mini Camera Link cable.
- **External trigger:** External trigger should be connected to the external auxiliary I/O (connector 1 on cable adapter bracket).

EXTERNAL AUX. I/O

(connector 1)

PIN NAME		PIN NO.		External Trigger Source	
				PIN NAME	PIN NO.
PO_OPTO_AUX_IN0 +		07	←	SIGNAL	--
PO_OPTO_AUX_IN0 -		02	←	GROUND	--

The DCFs mentioned in this application note are also attached (embedded) to this PDF file – use the Adobe Reader's View File Attachment to access the DCF files. The information furnished by Matrox Electronics System, Ltd. is believed to be accurate and reliable. Please verify all interface connections with camera documentation or manual. Contact your local sales representative or Matrox Sales office or Matrox Imaging Applications at 514-822-6061 for assistance. © Matrox Electronic Systems Ltd, 2010-2011.

Matrox Electronic Systems Ltd.

1055 St. Regis Blvd.
Dorval, Quebec H9P 2T4
Canada
Tel: (514) 685-2630
Fax: (514) 822-6273