

Matrox Odyssey Xpro

Camera Interface Application Note

SENTEC STC-CL1500

February 22, 2005

Basics about the
camera

Camera Descriptions

- Effective resolution: 1360 × 1024 × 10-bit @ 15 fps.
- Camera Link BASE interface (Single channel).
- Progressive scan.
- Internal sync.
- Internal or external exposure control.
- 26.636 MHz pixel clock rate.

Interface Mode

- Continuous
- Pseudo-continuous
- Asynchronous reset (Level controlled exposure mode)

Camera Interface Briefs

Mode 1: Continuous

- 1360 × 1024 × 10-bit @ 15 fps.
- Camera Link BASE interface (Single channel).
- Progressive scan.
- Matrox Odyssey Xpro receiving LDV, FDV, CLK and video signal from camera.
- DCF used: [STCCL1500_1360x1024_10bit1TapCon.DCF](#)



*Matrox Odyssey Xpro main board
with Camera Link grab module

Mode 2: Pseudo-continuous

- 1360 × 1024 × 10-bit.
- Camera Link BASE interface (Single channel).
- Progressive scan.
- Matrox Odyssey Xpro sending periodic EXPOSURE2 (CC1) signal to camera to initiate and control exposure time.
- Matrox Odyssey Xpro receiving LDV, FDV, CLK and video signal from camera.
- DCF used: [STCCL1500_1360x1024_10bit1TapPcon.DCF](#)



*Matrox Odyssey Xpro main board
with Camera Link grab module

Mode of operations as
per Matrox Imaging (in
parentheses as per
camera manufacturer)

Basics about the
interface modes

Matrox Odyssey Xpro

Camera Interface Application Note

SENTEC STC-CL1500


February 22, 2005

Basics about the
interface modes

Camera Interface Briefs (cont.)

Mode 3: Asynchronous reset

- 1360 × 1024 × 10-bit.
- Camera Link BASE interface (Single channel).
- Progressive scan.
- Matrox Odyssey Xpro receiving external trigger signal.
- Matrox Odyssey Xpro sending EXPOSURE2 (CC1) signal to camera to initiate and control exposure time.
- Matrox Odyssey Xpro receiving LDV, FDV, CLK and video signal from camera.
- DCF used: [STCCL1500_1360x1024_10bit1TapAsync.DCF](#)

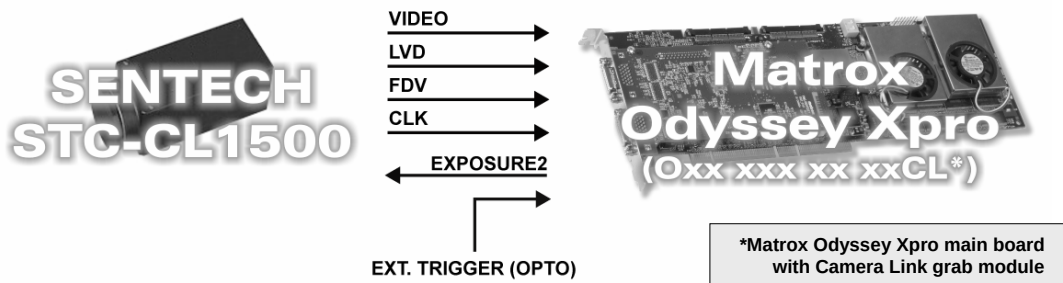

Specifics about the
interface modes

Camera Interface Details

Mode 1: Continuous

- **Frame Rate:** Matrox Odyssey Xpro receives the continuous video from the camera at 15 frames per second at full resolution.
- **Exposure time:** Exposure time is determined by the shutter setting. Refer to the camera manual for more information.
- **Camera switch settings:** Use the default switch settings.

Mode 2: Pseudo-continuous

- **Frame Rate/Exposure time:** The frame rate is determined by the EXPOSURE2 (CC1) setting in the DCF. Changing the frequency (delay period) will control the frame rate, while changing the width (falling edge to rising edge) of EXPOSURE2 (CC1) controls the frame rate as well as exposure time. The frame rate and exposure time can be modified using Matrox Intellicam, with the ONL imCamControl() or imDigControl() function, or with the MIL MdigControl() function. Refer to the respective manual for more information.
- **Camera switch settings:** Set the camera switch to **Level Controlled Exposure** by setting switch 2 of the 8 DIP switch to **ON**.

Specifics about the
interface modes

Matrox Odyssey Xpro

Camera Interface Application Note

SENTEC STC-CL1500

February 22, 2005

Specifics about the
interface modes

Camera Interface Details (cont.)

Mode 3: Asynchronous reset

- **Frame Rate:** The frame rate is determined by the frequency of the external trigger signal.
- **Exposure time:** The width (falling edge to rising edge) of the EXPOSURE2 (CC1) signal is the exposure time. The exposure time can be modified using Matrox Intellicam, ONL imCamControl() or imDigControl() function, or with the MIL MdigControl() function. Refer to the respective manual for more information.
- **Camera Control settings:** Same as Mode 2: Pseudo-continuous.

Cabling details for the
interface modes

Cabling Requirements

Modes 1 and 2: Continuous, Pseudo-continuous

- **Cable and Connection:** Standard Camera Link cable.

Mode 3: Asynchronous reset

- **Cable and Connection:** Standard Camera Link.
- **External trigger:** External trigger should be connected to the OPTO TRIG input of the 9-pin connector (pins 7 and 2) on the Expanded I/O adapter bracket.

EXPANDED I/O BRACKET (9-pin connector)

				External Trigger Source	
OPTOTRIG +	07	←	SIGNAL	--	
OPTOTRIG -	02	←	GROUND	--	

The DCFs mentioned in this application note are also attached (embedded) to this PDF file – use the Adobe Reader's View File Attachment to access the DCF files. The information furnished by Matrox Electronics System, Ltd. is believed to be accurate and reliable. Please verify all interface connections with camera documentation or manual. Contact your local sales representative or Matrox Sales office or Matrox Imaging Applications at 514-822-6061 for assistance. © Matrox Electronic Systems Ltd, 2005-2011.

Matrox Electronic Systems Ltd.

1055 St. Regis Blvd.
Dorval, Quebec H9P 2T4
Canada
Tel: (514) 685-2630
Fax: (514) 822-6273
ODY-CID-083

