
Matrox ConductIP Media Routing Appliance Setup

Device Connections and Button Functions

Note These Matrox ConductIP Media Routing Appliance (ConductIP MRA) images have been intentionally simplified for illustration purposes.

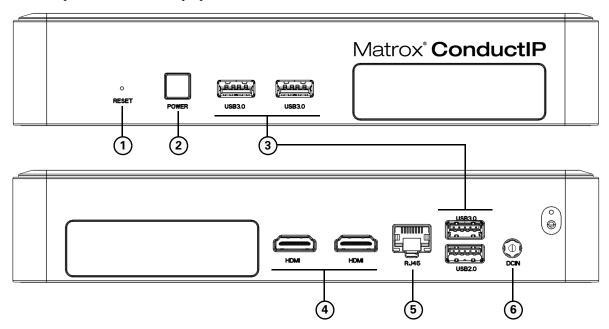


| Button/Connector | Description |
|-----------------------|---|
| (1) - Reset button | Reboot the ConductIP. Settings and configuration are maintained. |
| (2) - Power button | If the power cable is connected, power the ConductIP on or off. |
| (3) - USB 2.0 and 3.0 | (Optional) Use any of the USB ports for external connections (e.g. keyboard and mouse). |
| (4) - HDMI | (Optional) Connect HDMI monitor(s) for local connection setup. |
| (5) - RJ45 | Connect to your network using an ethernet cable. |
| (6) - DCIN | Connect the included 12v d.c. power cable and supply. |

Creating a Matrox ConductIP Administrator Account

To continue the setup, you must create a ConductIP Administrator account. You can either do this remotely over the network or locally by connecting a keyboard, mouse, and monitor to the ConductIP MRA.

- **Remote connection:** The ConductIP MRA boots in DHCP and broadcasts via mDNS, so you can use a web browser if you know the IP address or go to *https://conductip*. Alternatively, you can use the *Matrox ConvertIP Manager* utility, which includes its own HTML Help for guidance.
- Local connection: Connect the peripherals as described in "Device Connections and Button Functions", then power on the ConductIP. The splash screen will appear, followed by the ConductIP Boot Menu.

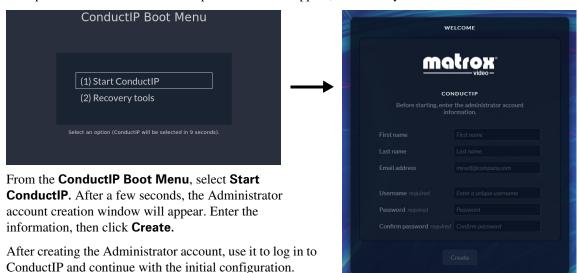

Setting up your Matrox ConductIP

After logging in to ConductIP as an Administrator, you can configure the software locally from the MRA or via a web browser from any network computer.

Before setting up Users, Rooms, and Panels, complete these tasks (detailed in the *Matrox ConductIP Installation and User Guide*, accessible from the application itself):

- 1 Set the date and time: Correct settings are essential for activating your license.
- 2 Activate your license: Once the date and time are set, activate your trial or full license from Matrox.

Get the latest updates and other information

Go to video.matrox.com/conductip/software for the latest updates, documentation, and utilities.