Camera Interface Application Note


Sentech STC-CL152A

March 16, 2011

Basics about the camera	Camera Descriptions
	 Effective resolution: 1360 × 1040 × 10-bit @ 20 fps. Camera Link BASE interface (Single tap). Progressive scan. Internal sync. Internal or external exposure control. 28.6363 MHz pixel clock rate.
Mode of operations as per Matrox Imaging (in parentheses as per camera manufacturer)	Interface Mode
	 Continuous (Continuous Mode) Pseudo-continuous (Pulse Width Trigger Mode) Asynchronous reset (Pulse Width Trigger Mode)
Basics about the interface modes	Camera Interface Briefs

Mode 1: Continuous

- 1360 × 1040 × 10-bit @ 20 fps.
- Camera Link BASE interface (Single tap).
- Matrox Radient eCL receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 28.6363 MHz) and video from camera.
- DCF used: STCCL152A 1360x1040 10bitCon.DCF

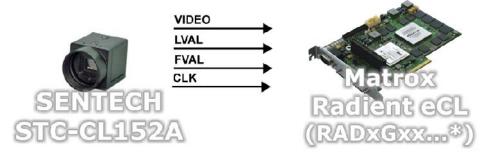

Mode 2: Pseudo-continuous

- 1360 × 1040 × 10-bit.
- Camera Link BASE interface (Single tap).
- Matrox Radient eCL sending TIMER 1 OUT (CC1) signal to camera to initiate and control the exposure.
- Matrox Radient eCL receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 28.6363 MHz) and video from camera.
- DCF used: STCCL152A 1360x1040 10bitPcon.DCF



Camera Interface Application Note


Sentech STC-CL152A

March 16, 2011

Basics about the interface modes


Camera Interface Briefs (cont.)

Mode 2: Pseudo-continuous

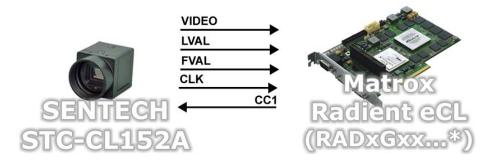

Mode 3: Asynchronous reset

- 1360 × 1040 × 10-bit.
- Camera Link BASE interface (Single tap).
- Matrox Radient eCL receiving external trigger signal.
- Matrox Radient eCL sending TIMER 1 OUT (CC1) signal to camera to initiate and control the exposure.
- Matrox Radient eCL receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 28.6363 MHz) and video from camera.
- DCF used: STCCL152A_1360x1040_10bitAsync.DCF

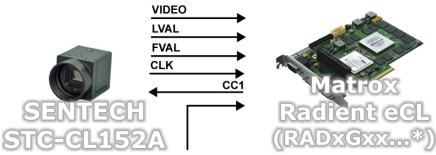

EXT. FRAME TRIGGER (OPTO)

Specifics about the interface modes

Camera Interface Details

Mode 1: Continuous

- Frame rate: Matrox Radient eCL receives the continuous video from the camera at 20 frames per second.
- **Exposure time:** Exposure time is set using the integration time setting in the Camera Configuration utility. Refer to the camera manual for more information.



Camera Interface Application Note

Sentech STC-CL152A

March 16, 2011

Specifics about the interface modes	Camera Interface Details (cont.)					
	Mode 1: Continuous					
	■ Camera control settings: Set the camera using the Sentech SOF-Cube Camera Configuration Utility as follows: Trigger Mode = Normal Output Mode = 10-bit					
	Mode 2: Pseudo-continuous					
	• Frame rate: The frame rate is determined by the frequency of the TIMER1 OUT (CC1) signal.					
	■ Exposure time: The TIMER1 OUT (CC1) signal's active duration initiates and controls the exposure time, which can be modified in the DCF using Matrox Intellicam or with the MIL MdigControl() function. Consult the respective manual for more information.					
	■ Camera control settings: Set the camera using the Sentech SOF-Cube Camera Configuration Utility as follows: Trigger Mode = Pulse Width Trigger Output Mode = 10-bit Trigger Reset Mode = V-Reset					
	Mode 3: Asynchronous Reset					
	 Frame rate: The frame rate is determined by the frequency of the external trigger signal. The period between the external trigger signals must be larger than the frame readout period plus the exposure time. Exposure time: Refer to Mode 2: Pseudo-continuous. Camera settings: Refer to Mode 2: Pseudo-continuous. 					
Cabling details for the interface modes	Cabling Requirements					

Mode 1 and 2: Continuous and Pseudo-continuous

• Cable and Connection: One Mini-To-Mini Camera Link cable.



Camera Interface Application Note

Sentech STC-CL152A

March 16, 2011

Cabling details for the interface modes	Cabling Require	Cabling Requirements (cont.)					
	Mode 3: Asynchi	Mode 3: Asynchronous Reset					
	■ Cable and Connection: One Mini-To-Mini Camera Link cable.						
		 External trigger: External trigger should be connected to the external auxiliary I/C (connector A on Matrox Radient eCL bracket). EXTERNAL AUX. I/O 					
	(connector A)	(connector A) External Trigger Source					
	PIN NAME	PIN NO.		PIN NAME	PIN NO.		
	OPTO_AUX_IN0 +	15	←	SIGNAL			
	OPTO AUX INO -	09	(GROUND			

The DCFs mentioned in this application note are also attached (embedded) to this PDF file – use the Adobe Reader's View File Attachment to access the DCF files. The information furnished by Matrox Electronics System, Ltd. is believed to be accurate and reliable. Please verify all interface connections with camera documentation or manual. Contact your local sales representative or Matrox Sales office or Matrox Imaging Applications at 514-822-6061 for assistance. © Matrox Electronic Systems Ltd, 2010-2011.

Matrox Electronic Systems Ltd.

1055 St. Regis Blvd. Dorval, Quebec H9P 2T4 Canada Tel: (514) 685-2630 Fax: (514) 822-6273

