

Matrox Solios eCL/XCL

Camera Interface Application Note

Illunis XMV-2020C

May 1, 2007

Basics about the
camera

Camera Descriptions

- Effective resolution: $1600 \times 1200 \times 12\text{-bit}$ @ 33.6 fps.
- Camera Link BASE interface (Single tap).
- Bayer Color Filter.
- Progressive scan.
- Internal sync.
- External or internal exposure control.
- 40 MHz pixel clock rate.


Interface Mode

- Continuous (Free run)
- Pseudo-continuous (Triggered Manual Exposure)
- Asynchronous reset (Triggered Manual Exposure)

Camera Interface Briefs

Mode 1: Continuous

- $1600 \times 1200 \times 12\text{-bit}$ @ 33.6 fps.
- Camera Link BASE interface (Single tap).
- Progressive scan.
- Matrox Solios eCL/XCL receiving LVAL, FVAL, PCLK and video from camera.
- DCF used: [XMV2020C_1600x1200_12bitBayerCon.DCF](#)

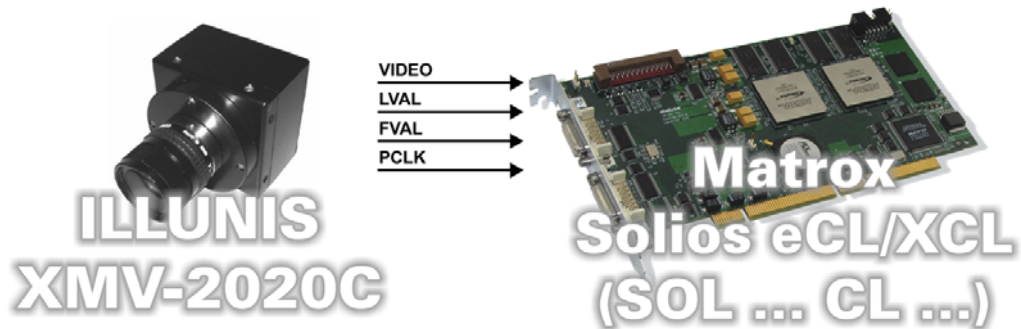

Mode 2: Pseudo-Continuous

- $1600 \times 1200 \times 12\text{-bit}$.
- Camera Link BASE interface (Single tap).
- Progressive scan.
- Matrox Solios eCL/XCL sending TIMER1 OUT (CC1) signal to camera to initiate and control the exposure.
- Matrox Solios eCL/XCL receiving LVAL, FVAL, PCLK and video from camera.

Continued...

Mode of operations as
per Matrox Imaging (in
parentheses as per
camera manufacturer)

Basics about the
interface modes

Matrox Solios eCL/XCL

Camera Interface Application Note

Illunis XMV-2020C


May 1, 2007

Basics about the
interface modes

Camera Interface Briefs (cont.)


Mode 2: Pseudo-Continuous

- DCF used: [XMV2020C_1600x1200_12bitBayerPcon.DCF](#)

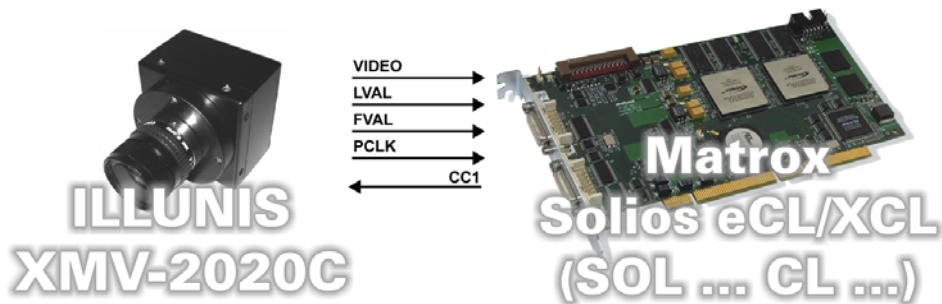

Mode 3: Asynchronous reset

- 1600 × 1200 × 12-bit.
- Camera Link BASE interface (Single tap).
- Progressive scan.
- Matrox Solios eCL/XCL receiving external trigger signal.
- Matrox Solios eCL/XCL sending TIMER1 OUT (CC1) signal to camera to initiate and control the exposure.
- Matrox Solios eCL/XCL receiving LVAL, FVAL, PCLK and video from camera.
- DCF used: [XMV2020C_1600x1200_12bitBayerAsync.DCF](#)

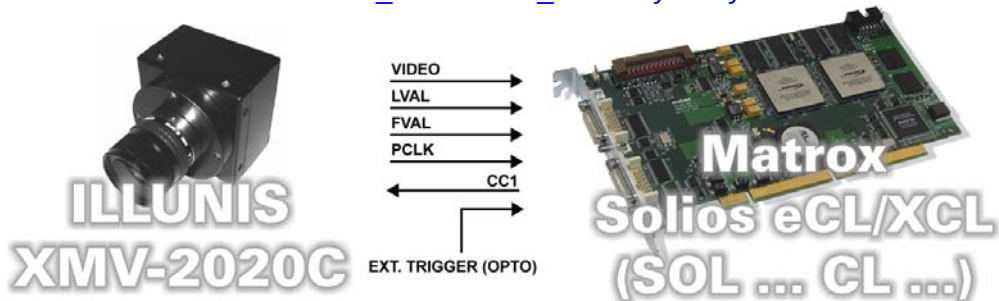

Specifics about
the interface modes

Camera Interface Details

Mode 1: Continuous

- **Frame Rate:** Matrox Solios eCL/XCL receives the continuous video from the camera at 33.6 frames per second.
- **Exposure time:** Exposure time is set using the shutter speed setting in the Camera Configuration Utility. Refer to the camera manual for more information.

Continued...

Matrox Solios eCL/XCL

Camera Interface Application Note

Illunis XMV-2020C

May 1, 2007

Specifics about
the interface modes

Camera Interface Details (cont.)

Mode 1: Continuous

- **Bayer Color Filter:** Color information is generated by a Bayer color mosaic filter mounted on the sensor. Refer to the MIL online Help for information on using buffers with the Bayer color filter.
- **Camera control settings:** Using the Illunis XMV Camera Control Application, set the camera controls as follows:

Control	Setting
Exposure readout	Free Run

Mode 2: Pseudo-Continuous

- **Frame rate:** The frame rate is determined by the frequency of the TIMER1 OUT (CC1) signal.
- **Exposure time:** The width of the TIMER1 OUT (CC1) signal is the exposure time, which can be modified in the DCF using Matrox Intellicam or with the MIL MdigControl() function. Consult the respective manual for more information.
- **Bayer Color Filter:** Refer to Mode 1: Continuous.
- **Camera control settings:** Using the Illunis XMV Camera Control Application, set the camera controls as follows:

Control	Setting
Exposure readout	Triggered Manual Exposure

Mode 3: Asynchronous Reset

- **Frame rate:** The frame rate is determined by the frequency of the external trigger signal.
- **Exposure time:** Refer to Mode 2: Pseudo-Continuous.
- **Bayer Color Filter:** Refer to Mode 1: Continuous.
- **Camera Configuration:** Refer to Mode 2: Pseudo-Continuous.

Cabling details for the
interface modes

Cabling Requirements

Modes 1 and 2: Continuous, Pseudo-continuous

- **Cable and Connection:** Standard Camera Link.

Matrox Solios eCL/XCL

Camera Interface Application Note

Illunis XMV-2020C

May 1, 2007

Cabling details for the
interface modes

Cabling Requirements

Mode 3: Asynchronous reset

- **Cable and Connection:** Standard Camera Link.
- **External trigger:** External trigger should be connected to the OPTO TRIG input of the 9-pin connector (pins 7 and 2) on the Expanded I/O adapter bracket.

EXPANDED I/O BRACKET (9-pin connector)

				External Trigger Source	
OPTOTRIG +	07	←	LINE SIGNAL	--	
OPTOTRIG -	02	←	LINE GROUND	--	

The DCFs mentioned in this application note are also attached (embedded) to this PDF file – use the Adobe Reader's View File Attachment to access the DCF files. The information furnished by Matrox Electronics System, Ltd. is believed to be accurate and reliable. Please verify all interface connections with camera documentation or manual. Contact your local sales representative or Matrox Sales office or Matrox Imaging Applications at 514-822-6061 for assistance. © Matrox Electronic Systems Ltd, 2007-2011.

Matrox Electronic Systems Ltd.

1055 St. Regis Blvd.
Dorval, Quebec H9P 2T4
Canada
Tel: (514) 685-2630
Fax: (514) 822-6273

SOL-CID-057

