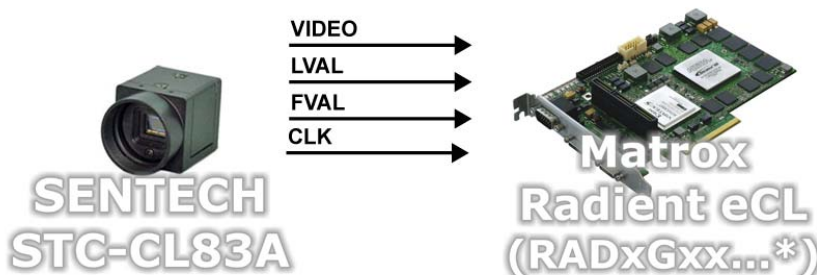


Matrox Radiant eCL

Camera Interface Application Note

Sentech STC-CL83A

March 16, 2011

Basics about the camera	Camera Descriptions ▪ Effective resolution: 1024 × 768 × 10-bit @ 30 fps. ▪ Camera Link BASE interface (Single tap). ▪ Progressive scan. ▪ Internal sync. ▪ Internal or external exposure control. ▪ 29.5 MHz pixel clock rate.
Mode of operations as per Matrox Imaging (in parentheses as per camera manufacturer)	Interface Mode ▪ Continuous (Continuous Mode) ▪ Pseudo-continuous (Pulse Width Trigger Mode) ▪ Asynchronous reset (Pulse Width Trigger Mode)
Basics about the interface modes	Camera Interface Briefs <i>Mode 1: Continuous</i> ▪ 1024 × 768 × 10-bit @ 30 fps. ▪ Camera Link BASE interface (Single tap). ▪ Matrox Radiant eCL receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 29.5 MHz) and video from camera. ▪ DCF used: STCCL83A_1024x768_10bitCon.DCF  SENTECH STC-CL83A Matrox Radiant eCL (RADxGxx...*) <i>Mode 2: Pseudo-continuous</i> ▪ 1024 × 768 × 10-bit. ▪ Camera Link BASE interface (Single tap). ▪ Matrox Radiant eCL sending TIMER 1 OUT (CC1) signal to camera to initiate and control the exposure. ▪ Matrox Radiant eCL receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 29.5 MHz) and video from camera. ▪ DCF used: STCCL83A_1024x768_10bitPcon.DCF

Matrox Radiant eCL

Camera Interface Application Note


Sentech STC-CL83A

March 16, 2011

Basics about the interface modes


Camera Interface Briefs (cont.)

Mode 2: Pseudo-continuous

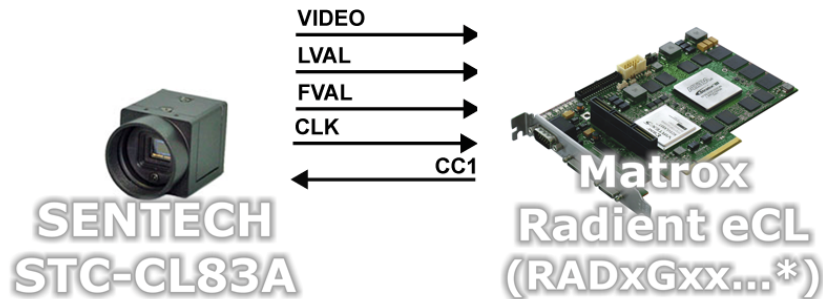

Mode 3: Asynchronous reset

- 1024 × 768 × 10-bit.
- Camera Link BASE interface (Single tap).
- Matrox Radiant eCL receiving external trigger signal.
- Matrox Radiant eCL sending TIMER 1 OUT (CC1) signal to camera to initiate and control the exposure.
- Matrox Radiant eCL receiving LVAL, FVAL, PIXEL CLOCK (CLK @ 29.5 MHz) and video from camera.
- DCF used: [STCCL83A_1024x768_10bitAsync.DCF](#)

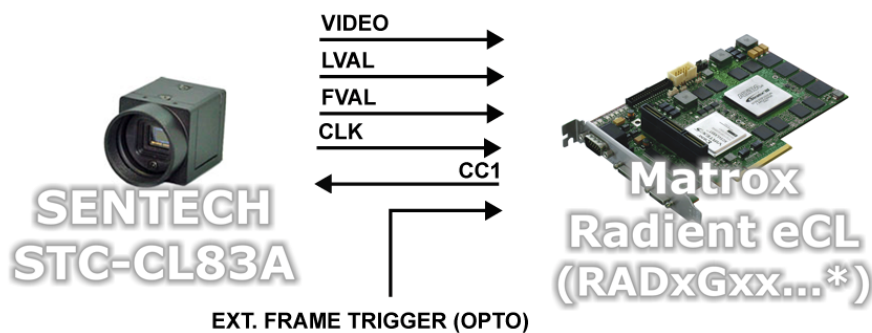

Specifics about the interface modes

Camera Interface Details

Mode 1: Continuous

- **Frame rate:** Matrox Radiant eCL receives the continuous video from the camera at 30 frames per second.
- **Exposure time:** Exposure time is set using the integration time setting in the Camera Configuration utility. Refer to the camera manual for more information.

Matrox Radiant eCL

Camera Interface Application Note

Sentech STC-CL83A

March 16, 2011

Specifics about the interface modes

Camera Interface Details (cont.)

Mode 1: Continuous

- **Camera control settings:** Set the camera using the Sentech SOF-Cube Camera Configuration Utility as follows: Trigger Mode = Normal | Output Mode = 10-bit

Mode 2: Pseudo-continuous

- **Frame rate:** The frame rate is determined by the frequency of the TIMER1 OUT (CC1) signal.
- **Exposure time:** The TIMER1 OUT (CC1) signal's active duration initiates and controls the exposure time, which can be modified in the DCF using Matrox Intellicam or with the MIL MdigControl() function. Consult the respective manual for more information.
- **Camera control settings:** Set the camera using the Sentech SOF-Cube Camera Configuration Utility as follows: Trigger Mode = Pulse Width Trigger | Output Mode = 10-bit | Trigger Reset Mode = V-Reset

Mode 3: Asynchronous Reset

- **Frame rate:** The frame rate is determined by the frequency of the external trigger signal. The period between the external trigger signals must be larger than the frame readout period plus the exposure time.
- **Exposure time:** Refer to Mode 2: Pseudo-continuous.
- **Camera settings:** Refer to Mode 2: Pseudo-continuous.

Cabling details for the interface modes

Cabling Requirements

Mode 1 and 2: Continuous and Pseudo-continuous

- **Cable and Connection:** One Mini-To-Mini Camera Link cable.

Matrox Radiant eCL

Camera Interface Application Note

Sentech STC-CL83A

March 16, 2011

Cabling details for the interface modes

Cabling Requirements (cont.)

Mode 3: Asynchronous Reset

- **Cable and Connection:** One Mini-To-Mini Camera Link cable.
- **External trigger:** External trigger should be connected to the external auxiliary I/O (connector A on Matrox Radiant eCL bracket).

EXTERNAL AUX. I/O

(connector A)

PIN NAME	PIN NO.		External Trigger Source	
			PIN NAME	PIN NO.
OPTO_AUX_IN0 +	15	←	SIGNAL	--
OPTO_AUX_IN0 -	09	←	GROUND	--

The DCFs mentioned in this application note are also attached (embedded) to this PDF file – use the Adobe Reader's View File Attachment to access the DCF files. The information furnished by Matrox Electronics System, Ltd. is believed to be accurate and reliable. Please verify all interface connections with camera documentation or manual. Contact your local sales representative or Matrox Sales office or Matrox Imaging Applications at 514-822-6061 for assistance. © Matrox Electronic Systems Ltd, 2011.

Matrox Electronic Systems Ltd.

1055 St. Regis Blvd.
Dorval, Quebec H9P 2T4
Canada
Tel: (514) 685-2630
Fax: (514) 822-6273