

# Matrox Odyssey Xpro

## Camera Interface Application Note

### HITACHI HV-F22CL-S1

December 6, 2006

Basics about the camera

Mode of operations as per Matrox Imaging (in parentheses as per camera manufacturer)

Basics about the interface modes

#### Camera Descriptions

- Effective resolution:  $1360 \times 1024 \times 8\text{-bit}$  (RGB) @ 15 fps.
- Camera Link BASE interface (single tap).
- Progressive scan.
- Internal sync.
- Internal or external exposure control.
- 28.8 MHz pixel clock rate.

#### Interface Mode

- Continuous
- Pseudo-continuous
- Asynchronous reset (Trigger mode 1)

#### Camera Interface Briefs

##### Mode 1: Continuous

- $1360 \times 1024 \times 8\text{-bit}$  (RGB) @ 15 fps.
- Camera Link BASE interface (single tap).
- Progressive scan.
- Matrox Odyssey Xpro receiving LDV, FDV, CLK and video signal from camera.
- DCF used: [HVF22CL1360x1024\\_8bitCon.DCF](#)



\*Matrox Odyssey Xpro main board with Camera Link frame grabber module

##### Mode 2: Pseudo-continuous

- $1360 \times 1024 \times 8\text{-bit}$  (RGB).
- Camera Link BASE interface (single tap).
- Progressive scan.
- Matrox Odyssey Xpro sending periodic EXPOSURE1 (CC2) signal to camera to initiate and control exposure time.
- Matrox Odyssey Xpro receiving LDV, FDV, CLK and video signal from camera.

Continued...

# Matrox Odyssey Xpro

## Camera Interface Application Note

### HITACHI HV-F22CL-S1


December 6, 2006

Basics about the  
interface modes

#### Camera Interface Briefs (cont.)

##### Mode 2: Pseudo-continuous


- DCF used: [HVF22CL1360x1024\\_8bitPcon.DCF](#)

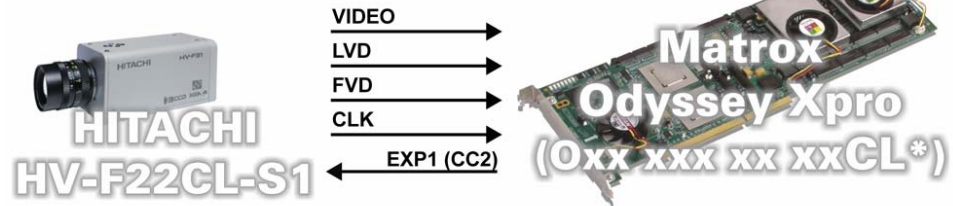

\*Matrox Odyssey Xpro main board with  
Camera Link frame grabber module

##### Mode 3: Asynchronous reset

- 1360 × 1024 × 8-bit (RGB).
- Camera Link BASE interface (single tap).
- Progressive scan.
- Matrox Odyssey Xpro receiving external trigger signal.
- Matrox Odyssey Xpro sending EXPOSURE1 (CC2) signal to camera to initiate and control exposure time.
- Matrox Odyssey Xpro receiving LDV, FDV, CLK and video signal from camera.
- DCF used: [HVF22CL1360x1024\\_8bitAsync.DCF](#)

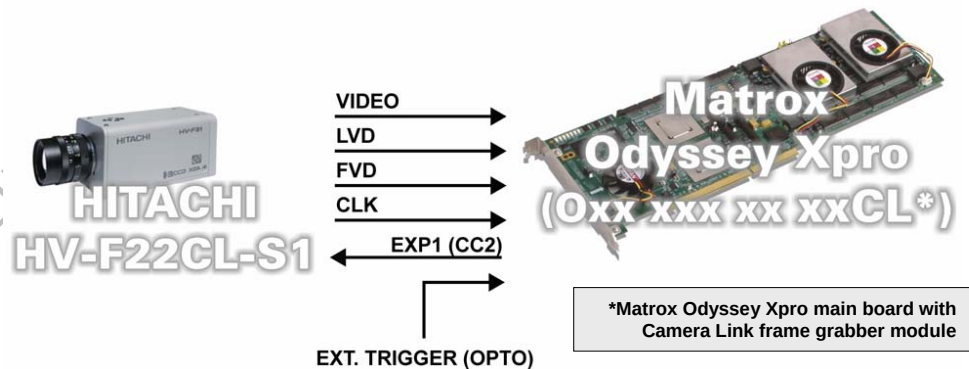

\*Matrox Odyssey Xpro main board with  
Camera Link frame grabber module

Specifics about the  
interface modes

#### Camera Interface Details

##### Mode 1: Continuous

- Frame Rate:** Matrox Odyssey Xpro receives the continuous video from the camera at 15 frames per second.
- Exposure time:** Exposure time is determined by the shutter setting. Refer to the camera manual for more information.
- Camera mode settings:** Set the camera mode to **trigger mode = off** using the camera manufacturer's configuration tool.

# Matrox Odyssey Xpro

## Camera Interface Application Note

### HITACHI HV-F22CL-S1

December 6, 2006

Specifics about the  
interface modes

#### Camera Interface Details (cont.)

##### Mode 2: Pseudo-continuous

- **Frame Rate/Exposure time:** The frame rate is determined by the EXPOSURE1 (CC2) setting in the DCF. Changing the frequency (delay period) will control the frame rate, while changing the width (falling edge to rising edge) of EXPOSURE1 (CC2) controls the frame rate as well as exposure time. The frame rate and exposure time can be modified using Matrox Intellicam, with the ONL imCamControl() or imDigControl() function, or with the MIL MdigControl() function. Refer to the respective manual for more information.
- **Camera mode settings:** Set the camera mode to **trigger mode 1** using the camera manufacturer's configuration tool.

##### Mode 3: Asynchronous reset

- **Frame Rate:** The frame rate is determined by the frequency of the external trigger signal.
- **Exposure time:** The width (falling edge to rising edge) of the EXPOSURE1 (CC2) signal is the exposure time. The exposure time can be modified using Matrox Intellicam, ONL imCamControl() or imDigControl() function, or with the MIL MdigControl() function. Refer to the respective manual for more information.
- **Camera mode settings:** Same as Mode 2: Pseudo-continuous.

#### Cabling Requirements

##### Modes 1 and 2: Continuous and Pseudo-continuous

- **Cable and Connection:** Standard Camera Link.

##### Mode 3: Asynchronous reset

- **Cable and Connection:** Standard Camera Link.
- **External trigger:** External trigger should be connected to the OPTO TRIG input of the 9-pin connector (pins 7 and 2) on the Expanded I/O adapter bracket.

##### EXPANDED I/O BRACKET

###### (9-pin connector)

|            |    | External Trigger Source |    |
|------------|----|-------------------------|----|
| OPTOTRIG + | 07 | SIGNAL                  | -- |
| OPTOTRIG - | 02 | GROUND                  | -- |

Cabling details for the  
interface modes

The DCFs mentioned in this application note are also attached (embedded) to this PDF file – use the Adobe Reader's View File Attachment to access the DCF files. The information furnished by Matrox Electronics System, Ltd. is believed to be accurate and reliable. Please verify all interface connections with camera documentation or manual. Contact your local sales representative or Matrox Sales office or Matrox Imaging Applications at 514-822-6061 for assistance. © Matrox Electronic Systems Ltd, 2006-2011.

##### Matrox Electronic Systems Ltd.

1055 St. Regis Blvd.  
Dorval, Quebec H9P 2T4  
Canada  
Tel: (514) 685-2630  
Fax: (514) 822-6273

ODY-CID-181

