

# Matrox Odyssey Xpro

## Camera Interface Application Note

### IMPERX IPX-11M5-L

August 3, 2007

Basics about the  
camera

#### Camera Descriptions

- Effective resolution:  $4000 \times 2672 \times 12\text{-bit}$  @ 4.5 fps.
- Camera Link BASE interface (Dual tap).
- Progressive scan.
- Internal sync.
- External or internal exposure control.
- 28 MHz pixel clock rate.

#### Interface Mode

- Continuous
- Pseudo-continuous (External Trigger)
- Asynchronous reset (External Trigger)


Mode of operations as  
per Matrox Imaging (in  
parentheses as per  
camera manufacturer)

Basics about the  
interface modes

#### Camera Interface Briefs

##### Mode 1: Continuous

- $4000 \times 2672 \times 12\text{-bit}$  @ 4.5 fps.
- Camera Link BASE interface (Dual tap).
- Progressive scan.
- Matrox Odyssey Xpro receiving LVAL, FVAL, PCLK and video from camera.
- DCF used: [IPX11M5L\\_4000x2672\\_12bitCon.DCF](#)

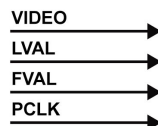

\*Matrox Odyssey Xpro main board  
with Camera Link grab module

##### Mode 2: Pseudo-Continuous

- $4000 \times 2672 \times 12\text{-bit}$ .
- Camera Link BASE interface (Dual tap).
- Progressive scan.
- Matrox Odyssey Xpro sending TIMER1 OUT (CC1) signal to camera to initiate and control the exposure.
- Matrox Odyssey Xpro receiving LVAL, FVAL, PCLK and video from camera.

# Matrox Odyssey Xpro

## Camera Interface Application Note

### IMPERX IPX-11M5-L



August 3, 2007

Basics about the  
interface modes

#### Camera Interface Briefs (cont.)

##### Mode 2: Pseudo-Continuous


- DCF used: [IPX11M5L\\_4000x2672\\_12bitPcont.DCF](#)

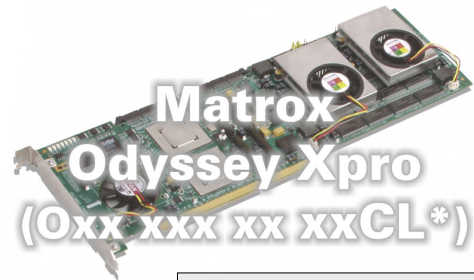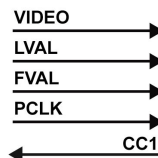

\*Matrox Odyssey Xpro main board  
with Camera Link grab module

##### Mode 3: Asynchronous reset

- 4000 × 2672 × 12-bit.
- Camera Link BASE interface (Dual tap).
- Progressive scan.
- Matrox Odyssey Xpro receiving external trigger signal.
- Matrox Odyssey Xpro sending TIMER1 OUT (CC1) signal to camera to initiate and control the exposure.
- Matrox Odyssey Xpro receiving LVAL, FVAL, PCLK and video from camera.
- DCF used: [IPX11M5L\\_4000x2672\\_12bitAsync.DCF](#)

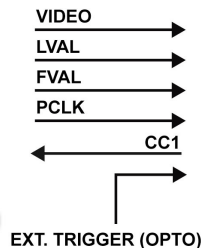

\*Matrox Odyssey Xpro main board  
with Camera Link grab module

Specifics about  
the interface modes

#### Camera Interface Details

##### Mode 1: Continuous

- Frame Rate:** Matrox Odyssey Xpro receives the continuous video from the camera at 4.5 frames per second.
- Exposure time:** Exposure time is set using the Imperx Lynx Camera Configuration Utility. Refer to the camera manual for commands description and usage.

# Matrox Odyssey Xpro

## Camera Interface Application Note

### IMPERX IPX-11M5-L

August 3, 2007

*Specifics about  
the interface modes*

#### Camera Interface Details (cont.)

##### **Mode 1: Continuous**

- **Camera Configuration:** The camera mode is set as follows using the Imperx Lynx Camera Configuration Utility. Refer to the camera manual for details about the following controls and their usage.

| Control | Setting |
|---------|---------|
| Depth   | 12bits  |
| Taps    | Dual    |
| Trigger | OFF     |

##### **Mode 2: Pseudo-Continuous**

- **Frame rate:** The frame rate is determined by the frequency of the TIMER1 OUT (CC1) signal.
- **Exposure time:** The width (rising edge to falling edge) of the TIMER1 OUT (CC1) signal is the exposure time, which can be modified in the DCF using Matrox Intellicam, ONL imCamControl() or imDigControl() function, or with the MIL MdigControl() function. Consult the respective manual for more information.
- **Camera Configuration:** The camera mode is set as follows using the Imperx Lynx Camera Configuration Utility. Refer to the camera manual for details about the following controls and their usage.

| Control             | Setting  |
|---------------------|----------|
| Depth               | 12bits   |
| Taps                | Dual     |
| Trigger             | CC       |
| Mode                | Standard |
| CC Exposure Control | Computer |

##### **Mode 3: Asynchronous Reset**

- **Frame rate:** The frame rate is determined by the frequency of the external trigger signal.
- **Exposure time:** Same as in Mode 2: Pseudo-continuous.
- **Bayer Color Filter:** Refer to *Mode 1: Continuous*.
- **Camera Configuration:** Same as in Mode 2: Pseudo-continuous.

# Matrox Odyssey Xpro

## Camera Interface Application Note

### IMPERX IPX-11M5-L

August 3, 2007

Cabling details for the  
interface modes

#### Cabling Requirements

##### *Modes 1 and 2: Continuous, Pseudo-continuous*

- **Cable and Connection:** Standard Camera Link cable.

##### *Mode 3: Asynchronous reset*

- **Cable and Connection:** Standard Camera Link.
- **External trigger:** External trigger should be connected to the OPTO TRIG input of the 9-pin connector (pins 7 and 2) on the Expanded I/O adapter bracket.

#### EXPANDED I/O BRACKET (9-pin connector)

#### External Trigger Source

|            |    |   |             |    |
|------------|----|---|-------------|----|
| OPTOTRIG + | 07 | ← | LINE SIGNAL | -- |
| OPTOTRIG - | 02 | ← | LINE GROUND | -- |

The DCFs mentioned in this application note are also attached (embedded) to this PDF file – use the Adobe Reader's View File Attachment to access the DCF files. The information furnished by Matrox Electronics System, Ltd. is believed to be accurate and reliable. Please verify all interface connections with camera documentation or manual. Contact your local sales representative or Matrox Sales office or Matrox Imaging Applications at 514-822-6061 for assistance. © Matrox Electronic Systems Ltd, 2007-2011.

#### Matrox Electronic Systems Ltd.

1055 St. Regis Blvd.  
Dorval, Quebec H9P 2T4  
Canada  
Tel: (514) 685-2630  
Fax: (514) 822-6273

ODY-CID-224

