

Matrox Odyssey Xpro

Camera Interface Application Note

REDLAKE MASD ES-3200

May 1, 2007

Basics about the camera

Mode of operations as per Matrox Imaging (in parentheses as per camera manufacturer)

Basics about the interface modes

Camera Descriptions

- Effective resolution: $2184 \times 1472 \times 12\text{-bit}$ @ 2.9 fps¹.
- Camera Link BASE interface (Single tap).
- Progressive scan.
- Internal sync.
- External or internal exposure control.
- 60 MHz pixel clock rate.


Interface Mode

- Pseudo-continuous (Level Controlled Trigger mode)
- Asynchronous reset (Level Controlled Trigger mode)

Camera Interface Briefs

Mode 1: Pseudo-Continuous

- $2184 \times 1472 \times 12\text{-bit}$.
- Camera Link BASE interface (Single tap).
- Progressive scan.
- Matrox Odyssey Xpro sending TIMER1 OUT (CC1) signal to camera to initiate and control the exposure.
- Matrox Odyssey Xpro receiving LVAL, FVAL, PCLK and video from camera.
- DCF used: [ES3200_2184x1472_12bitPcon.DCF](#)

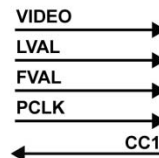

*Matrox Odyssey Xpro main board with Camera Link frame grabber module

Mode 2: Asynchronous reset

- $2184 \times 1472 \times 12\text{-bit}$.
- Camera Link BASE interface (Single tap).
- Progressive scan.

Continued...

¹ Not including integration time.

Matrox Odyssey Xpro

Camera Interface Application Note

REDLAKE MASD ES-3200


May 1, 2007

Basics about the
interface modes

Camera Interface Briefs (cont.)

Mode 2: Asynchronous reset

- Matrox Odyssey Xpro receiving external trigger signal.
- Matrox Odyssey Xpro sending TIMER1 OUT (CC1) signal to camera to initiate and control the exposure.
- Matrox Odyssey Xpro receiving LVAL, FVAL, PCLK and video from camera.
- DCF used: [ES3200_2184x1472_12bitPcont.DCF](#)

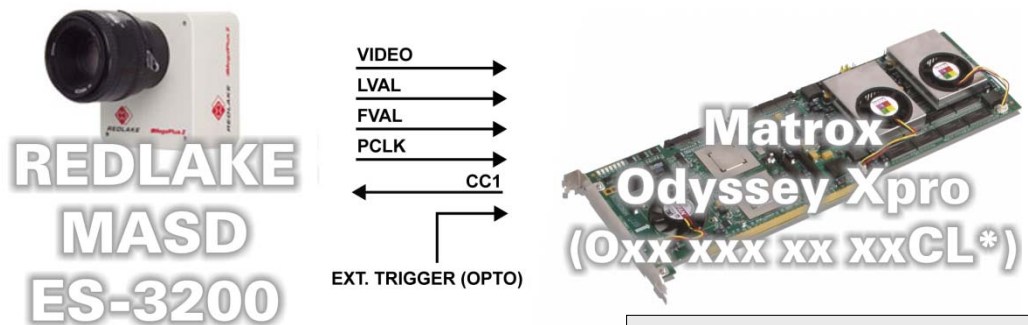

*Matrox Odyssey Xpro main board
with Camera Link frame grabber module

Camera Interface Details

Mode 1: Pseudo-Continuous

- **Frame rate:** The frame rate is determined by the frequency of the TIMER1 OUT (CC1) signal.
- **Exposure time:** The width of the TIMER1 OUT (CC1) signal is the exposure time, which can be modified in the DCF using Matrox Intellicam, with the ONL imCamControl() or imDigControl() function, or with the MIL MdigControl() function. Consult the respective manual for more information.
- **Camera control settings:** Using the MegaPlus II Central software, set the camera controls as follows:

Control	Setting
Output Data / Bit Depth	12 Bits
Mode selection	Level controlled

Mode 2: Asynchronous Reset

- **Frame rate:** The frame rate is determined by the frequency of the external trigger signal.
- **Exposure time:** Refer to Mode 1: Pseudo-Continuous.
- **Camera Configuration:** Refer to Mode 1: Pseudo-Continuous.

Specifics about
the interface modes

Matrox Odyssey Xpro

Camera Interface Application Note

REDLAKE MASD ES-3200

May 1, 2007

Cabling details for the
interface modes

Cabling Requirements

Mode 1: Pseudo-continuous

- **Cable and Connection:** Standard Camera Link.

Cabling details for the
interface modes

Cabling Requirements

Mode 2: Asynchronous reset

- **Cable and Connection:** Standard Camera Link.
- **External trigger:** External trigger should be connected to the OPTO TRIG input of the 9-pin connector (pins 7 and 2) on the Expanded I/O adapter bracket.

EXPANDED I/O BRACKET (9-pin connector)

External Trigger Source

OPTOTRIG +	07	←	LINE SIGNAL	--
OPTOTRIG -	02	←	LINE GROUND	--

The DCFs mentioned in this application note are also attached (embedded) to this PDF file – use the Adobe Reader's View File Attachment to access the DCF files. The information furnished by Matrox Electronics System, Ltd. is believed to be accurate and reliable. Please verify all interface connections with camera documentation or manual. Contact your local sales representative or Matrox Sales office or Matrox Imaging Applications at 514-822-6061 for assistance. © Matrox Electronic Systems Ltd, 2007-2011.

Matrox Electronic Systems Ltd.

1055 St. Regis Blvd.
Dorval, Quebec H9P 2T4
Canada
Tel: (514) 685-2630
Fax: (514) 822-6273

ODY-CID-197

