

Matrox Odyssey Xpro

Camera Interface Application Note

BASLER A504k

March 10, 2008

Basics about the
camera

Camera Descriptions

- Effective resolution: $1280 \times 1024 \times 8\text{-bit}$ @ 500 fps.
- Camera Link FULL interface (Ten taps).
- Progressive scan.
- Internal sync.
- External or internal exposure control.
- 67.58 MHz pixel clock rate.

Interface Mode

- Continuous
- Pseudo-continuous
- Asynchronous reset (EXSYNC Level-controlled)

Mode of operations as
per Matrox Imaging (in
parentheses as per
camera manufacturer)

Camera Interface Briefs

Mode 1: Continuous

- $1280 \times 1024 \times 8\text{-bit}$ @ 500 fps.
- Camera Link FULL interface (Ten taps).
- Progressive scan.
- Matrox Odyssey Xpro receiving LVAL, FVAL, PCLK and video from camera.
- DCF used: [A504k_1280x1024_8bit10tapsCon.DCF](#)



Mode 2: Pseudo-Continuous

- $1280 \times 1024 \times 8\text{-bit}$.
- Camera Link FULL interface (Ten taps).
- Progressive scan.
- Matrox Odyssey Xpro sending TIMER1 OUT (CC1) signal to camera to initiate and control the exposure.
- Matrox Odyssey Xpro receiving LVAL, FVAL, PCLK and video from camera.
- DCF used: [A504k_1280x1024_8bit10tapsPcon.DCF](#)

Continued...

*Matrox Odyssey Xpro main board
with the Single-FULL Camera Link
frame grabber module

Matrox Odyssey Xpro

Camera Interface Application Note

BASLER A504k

March 10, 2008

Basics about the interface modes

Camera Interface Briefs (cont.)


Mode 2: Pseudo-Continuous



*Matrox Odyssey Xpro main board with the Single-FULL Camera Link frame grabber module

Mode 3: Asynchronous reset

- 1280 × 1024 × 8-bit.
- Camera Link FULL interface (Ten taps).
- Progressive scan.
- Matrox Odyssey Xpro receiving external trigger signal.
- Matrox Odyssey Xpro sending TIMER1 OUT (CC1) signal to camera to initiate and control the exposure.
- Matrox Odyssey Xpro receiving LVAL, FVAL, PCLK and video from camera.
- DCF used: [A504k_1280x1024_8bit10tapsAsync.DCF](#)

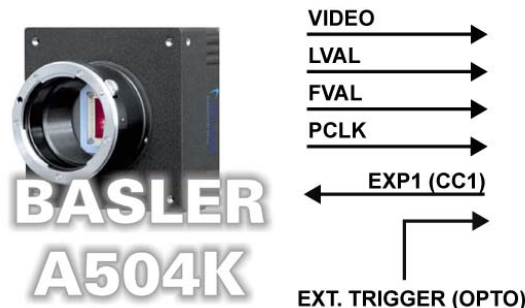

*Matrox Odyssey Xpro main board with the Single-FULL Camera Link frame grabber module

Specifics about the interface modes

Camera Interface Details

Mode 1: Continuous

- **Frame Rate:** Matrox Odyssey Xpro receives the continuous video from the camera at 500 frames per second.
- **Exposure time:** Exposure time is set using the shutter speed setting in the Camera Configuration Utility. Refer to the camera manual for more information.
- **Camera control settings:** Using the Basler Camera Configuration Tool Plus (CCT+), set the camera controls as follows:

Control	Setting
Output / Video Data Output mode	10 taps 8 Bits (CL Full Configuration)
Exposure / Exposure Time Control mode	Free Run, Programmable

Matrox Odyssey Xpro

Camera Interface Application Note

BASLER A504k

March 10, 2008

Specifics about the
interface modes

Camera Interface Details (cont.)

Mode 2: Pseudo-Continuous

- **Frame rate:** The frame rate is determined by the frequency of the TIMER1 OUT (CC1) signal.
- **Exposure time:** The width (falling to rising edge) of the TIMER1 OUT (CC1) signal is the exposure time, which can be modified in the DCF using Matrox Intellicam, with the ONL imCamControl() or imDigControl() function, or with the MIL MdigControl() function. Consult the respective manual for more information.
- **Camera control settings:** Using the Basler Camera Configuration Tool Plus (CCT+), set the camera controls as follows:

Control	Setting
Output / Video Data Output mode	10 taps 8 Bits (CL Full Configuration)
Exposure / Exposure Time Control mode	ExSync, Level-controlled

Mode 3: Asynchronous Reset

- **Frame rate:** The frame rate is determined by the frequency of the external trigger signal.
- **Exposure time:** Refer to Mode 2: Pseudo-Continuous.
- **Camera control settings:** Refer to Mode 2: Pseudo-Continuous.

Cabling Requirements

Modes 1 and 2: Continuous, Pseudo-continuous

- **Cable and Connection:** Two MDR26 Camera Link cables.

Mode 3: Asynchronous reset

- **Cable and Connection:** Two MDR26 Camera Link cables.
- **External trigger:** External trigger should be connected to the OPTO TRIG input of the 9-pin connector (pins 7 and 2) on the Expanded I/O adapter bracket.

EXPANDED I/O BRACKET (9-pin connector)

			External Trigger Source	
OPTOTRIG +	07	←	LINE SIGNAL	--
OPTOTRIG -	02	←	LINE GROUND	--

Cabling details for the
interface modes

Cabling details for the
interface modes

The DCFs mentioned in this application note are also attached (embedded) to this PDF file – use the Adobe Reader's View File Attachment to access the DCF files. The information furnished by Matrox Electronics System, Ltd. is believed to be accurate and reliable. Please verify all interface connections with camera documentation or manual. Contact your local sales representative or Matrox Sales office or Matrox Imaging Applications at 514-822-6061 for assistance. © Matrox Electronic Systems Ltd, 2008-2011.

Matrox Electronic Systems Ltd.

1055 St. Regis Blvd.
Dorval, Quebec H9P 2T4
Canada
Tel: (514) 685-2630
Fax: (514) 822-6273

ODY-CID-242

